




1

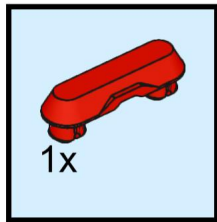



Besser erst die Kettenglieder mit der Felge vervollständigen und anschließend die Aufbauten arretieren.

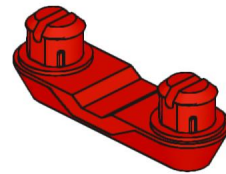



2

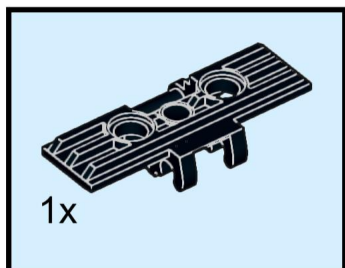



3

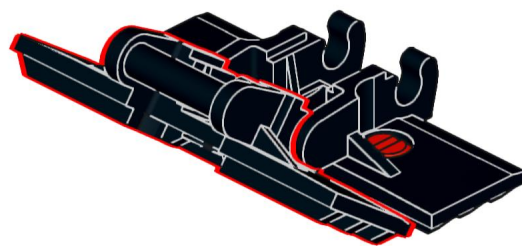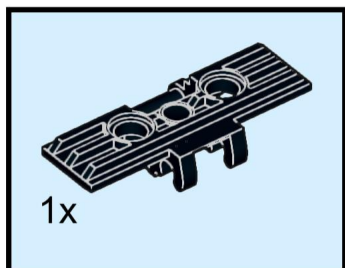



4

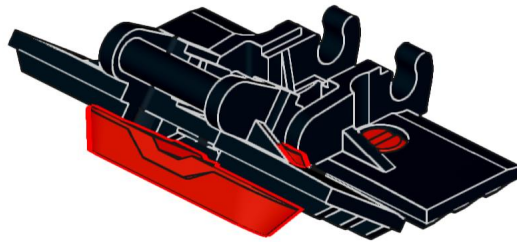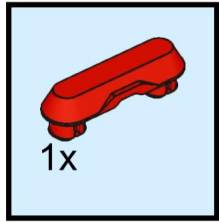



5

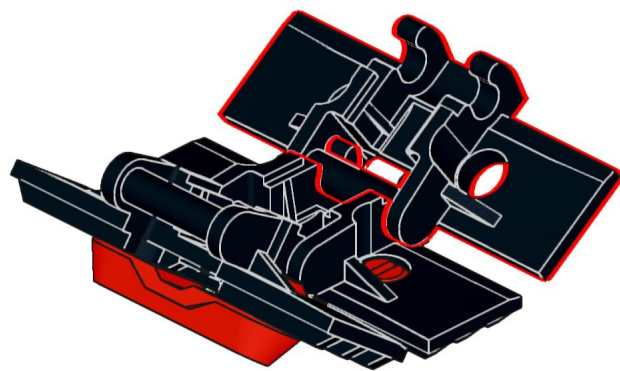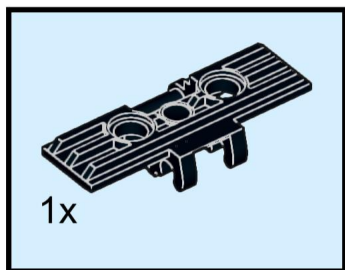



6

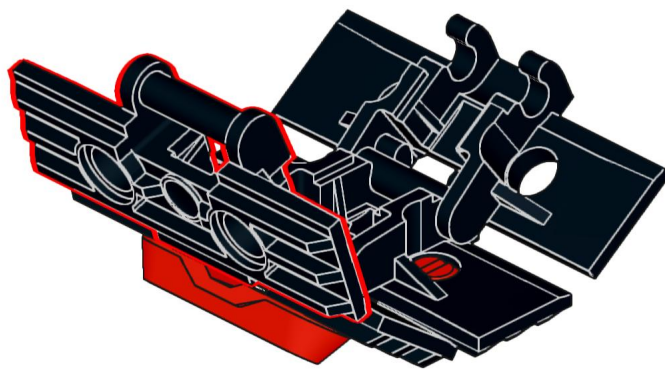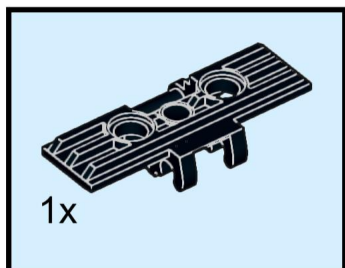



7

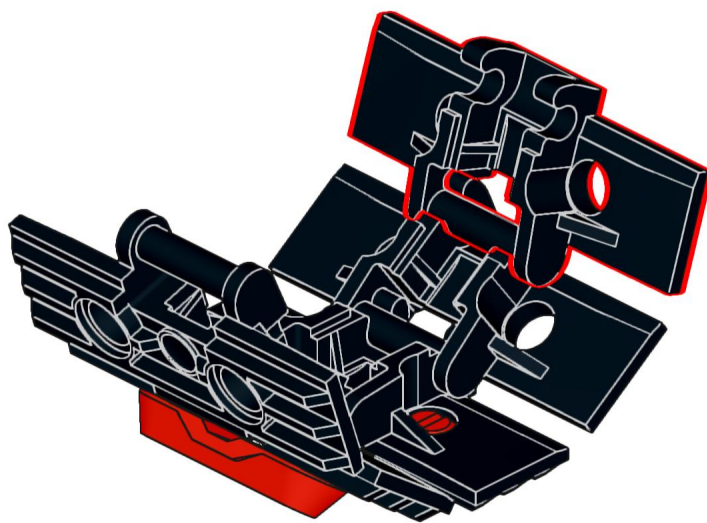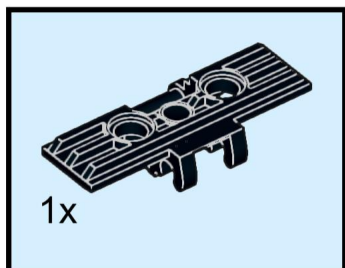



8

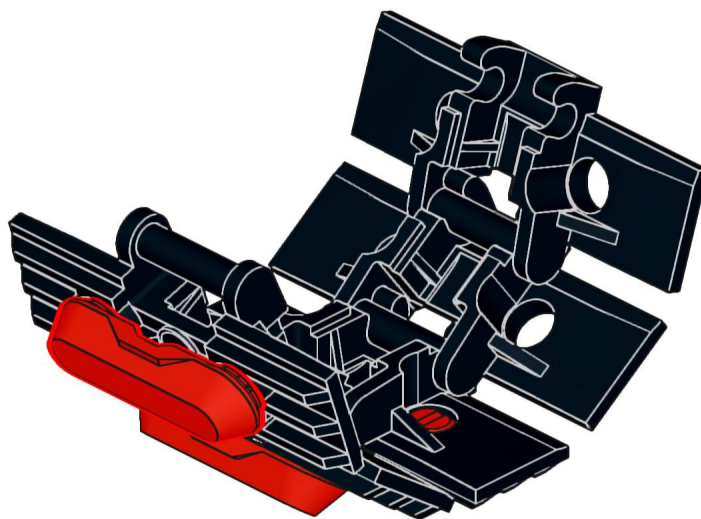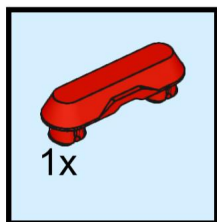



9

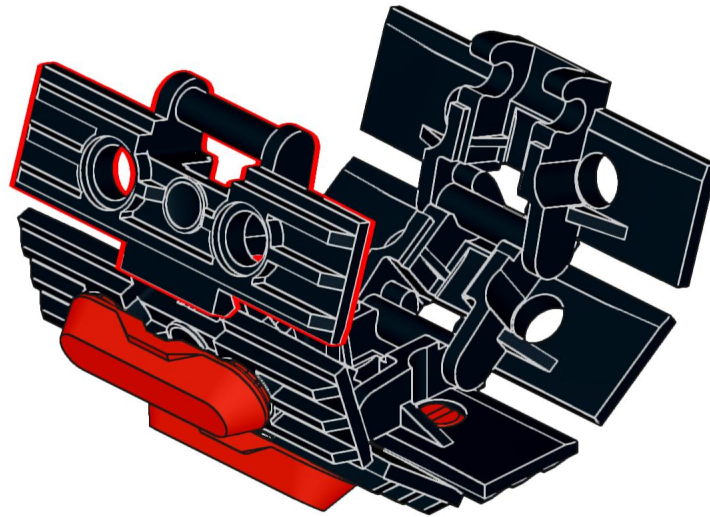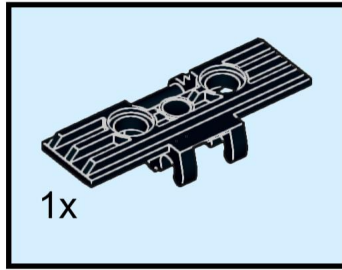



10

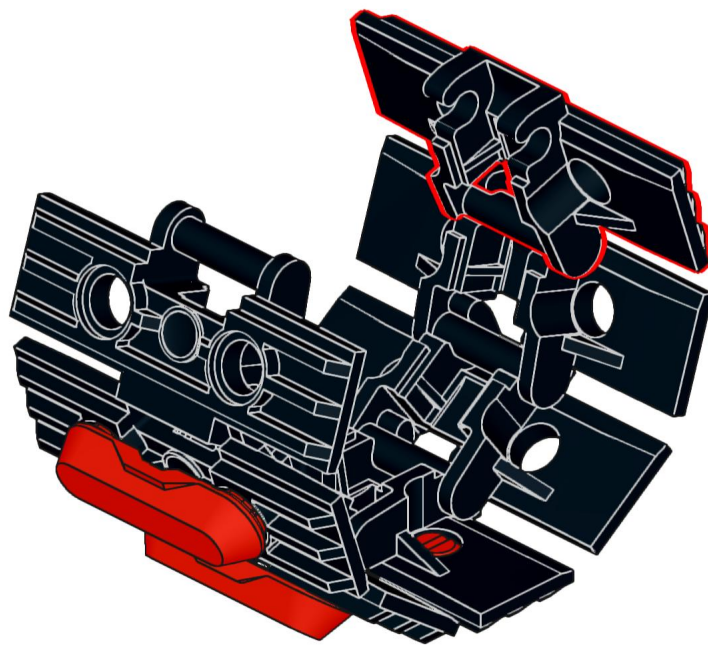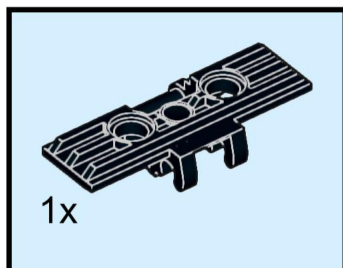



11

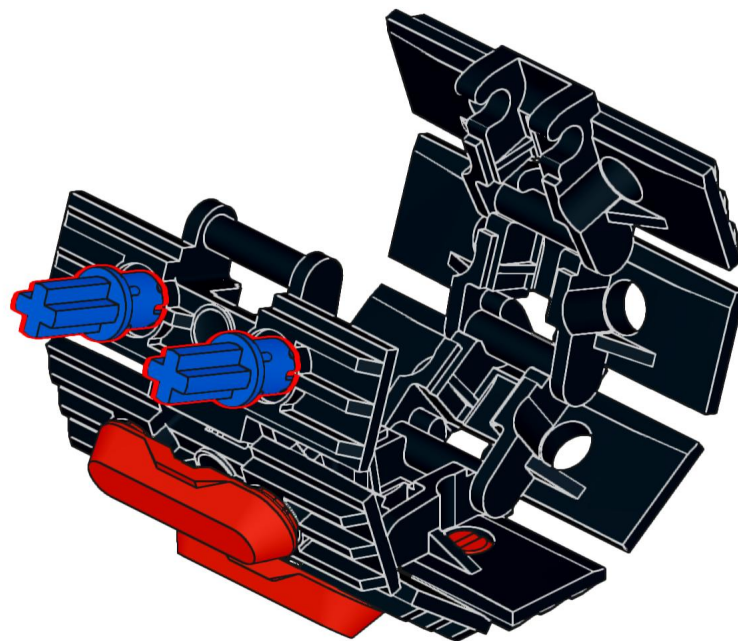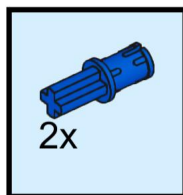



12

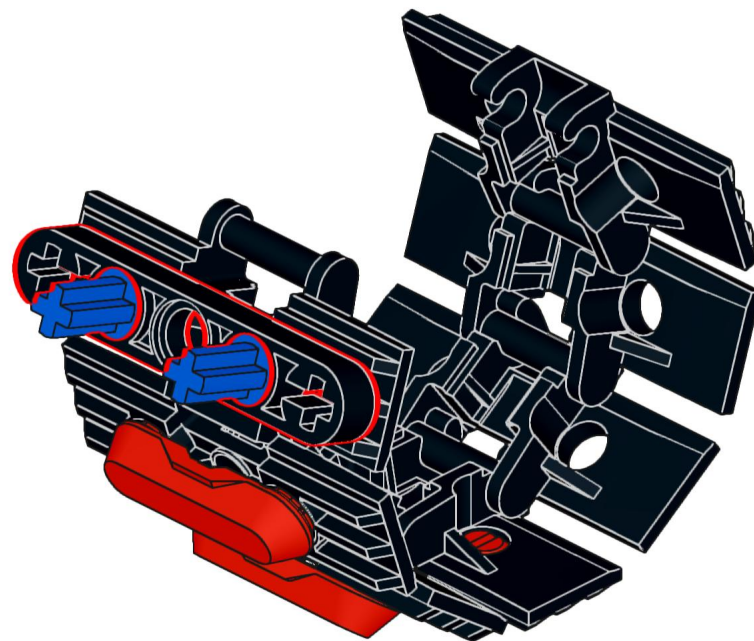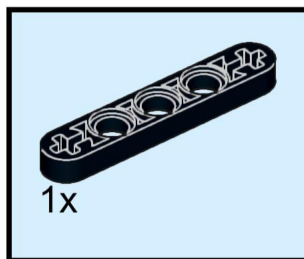



13

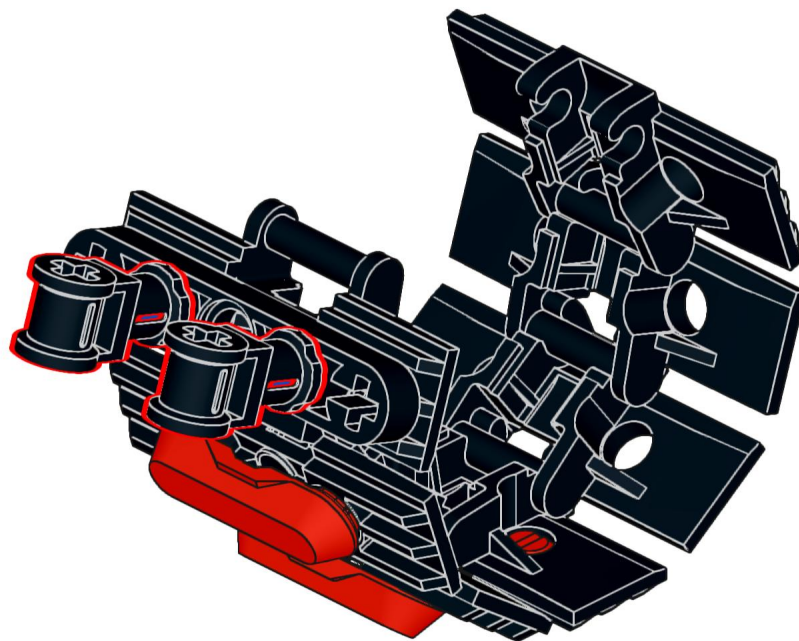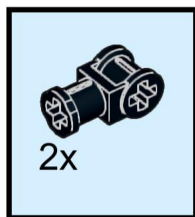



14

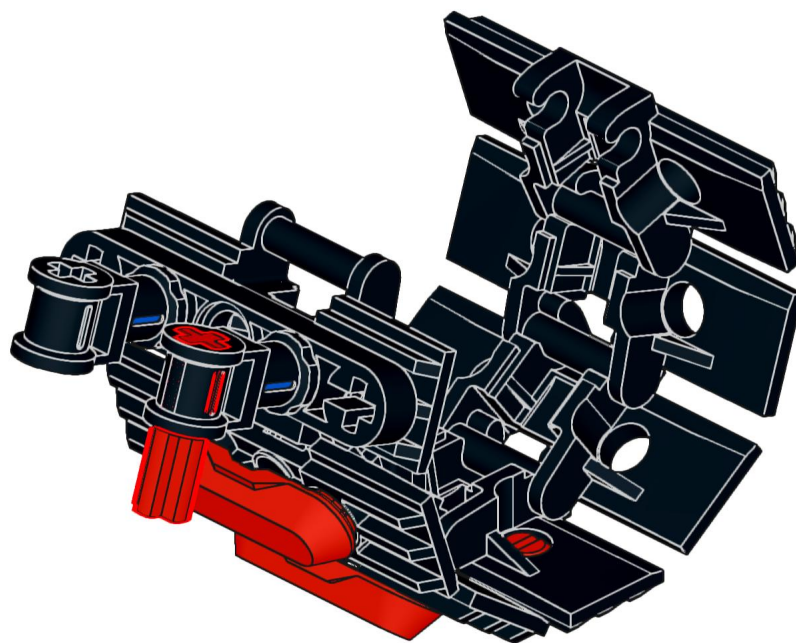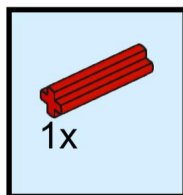



15

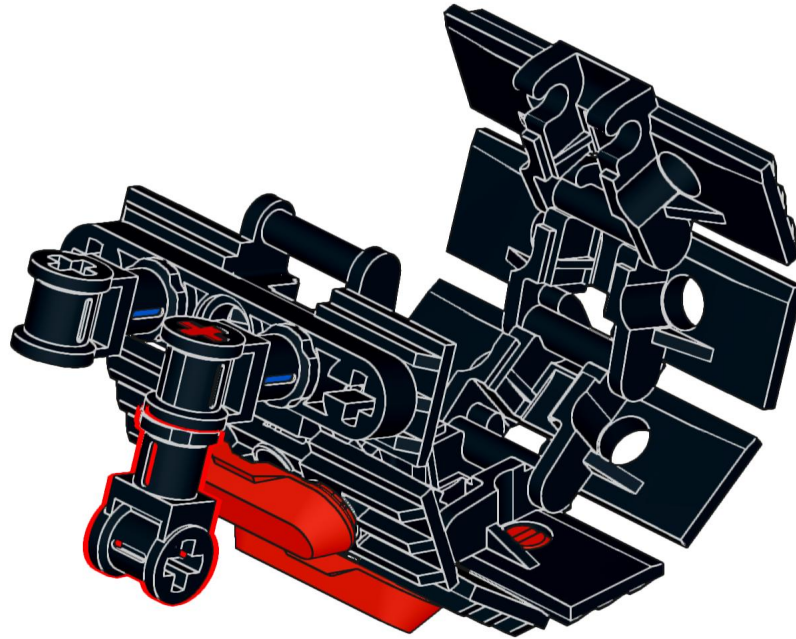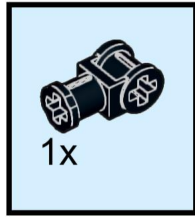



16

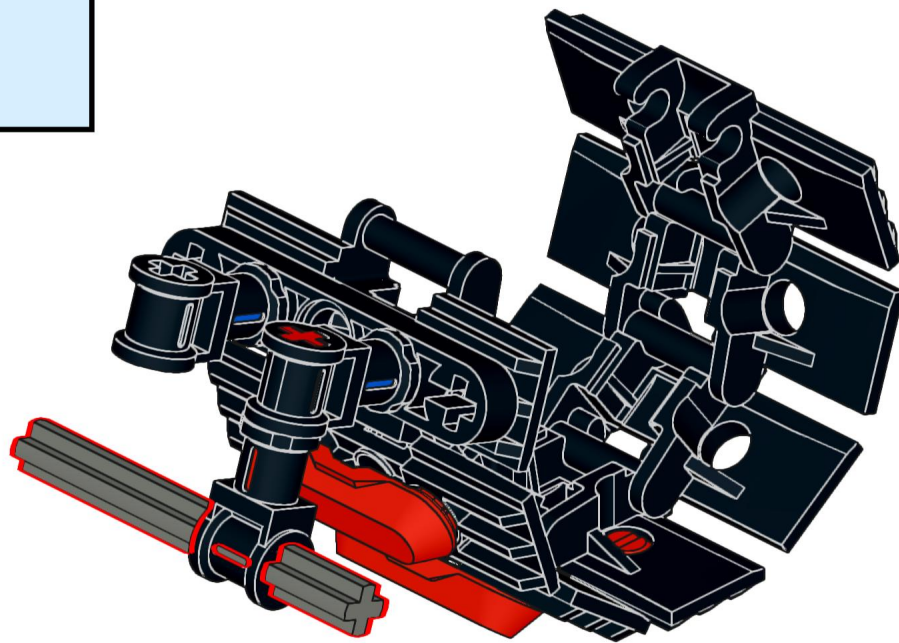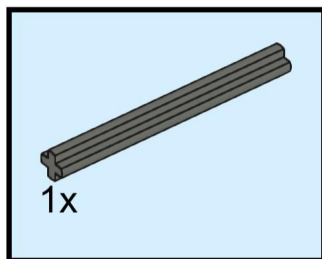



17

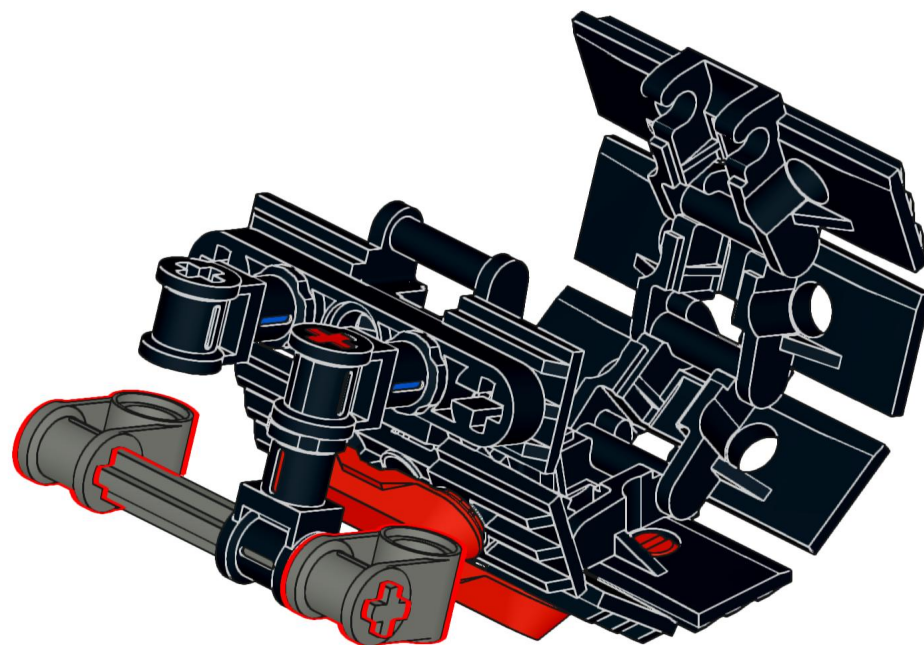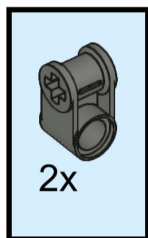



18

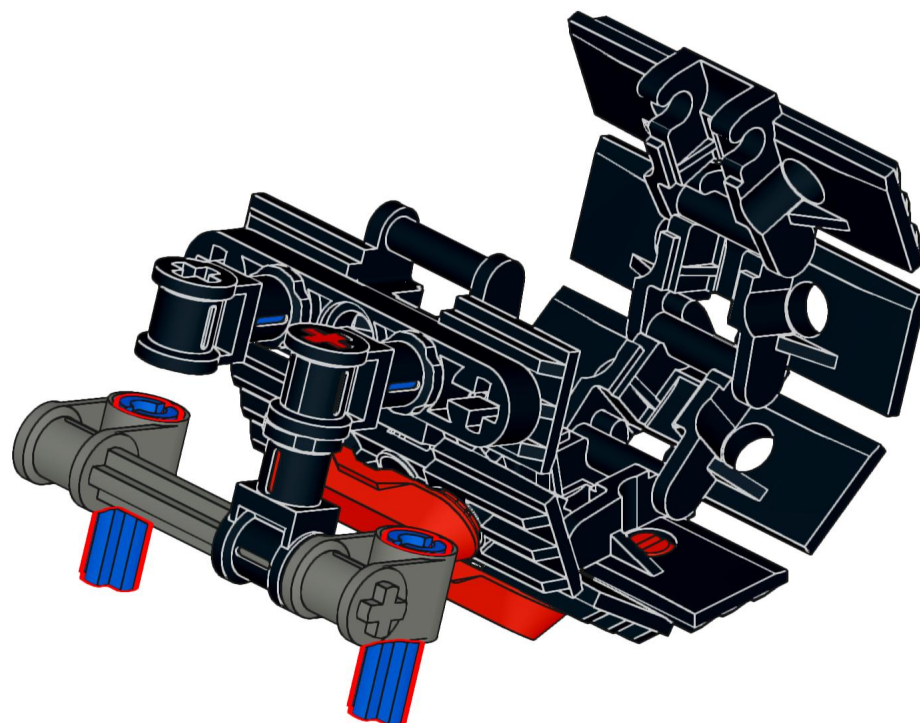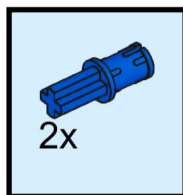



19

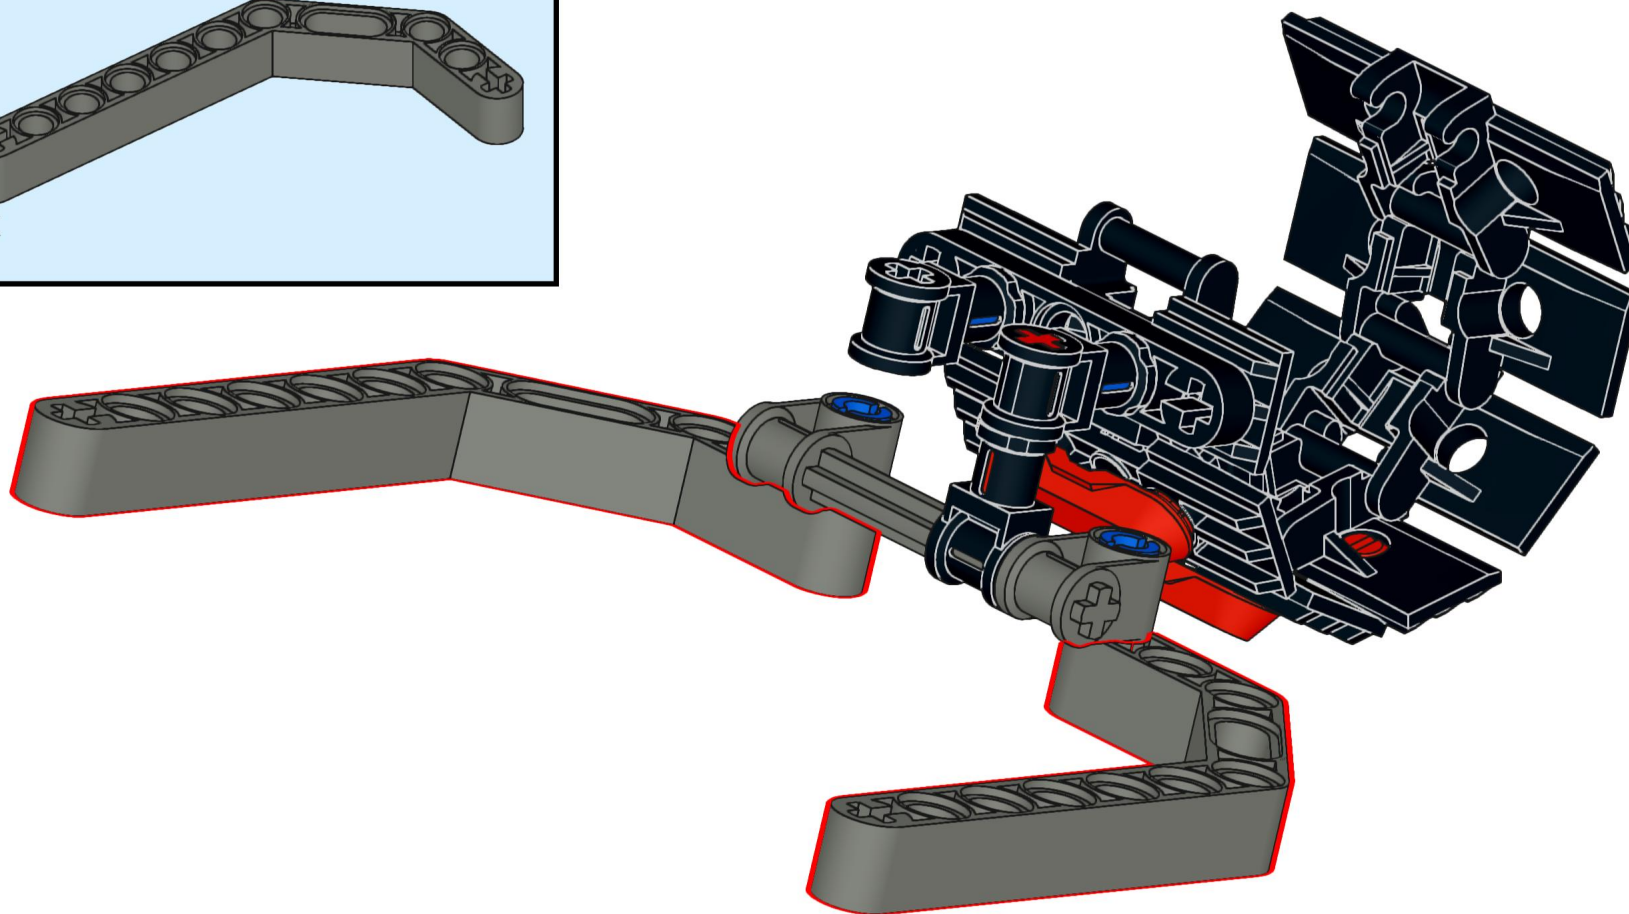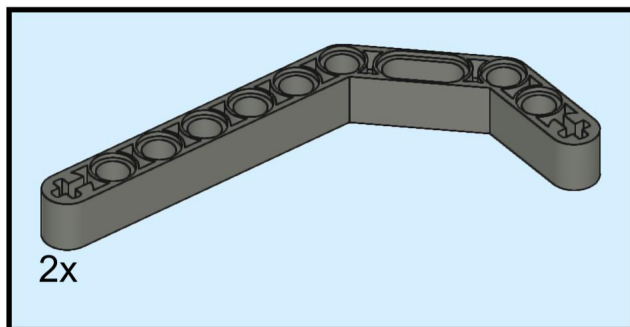



20

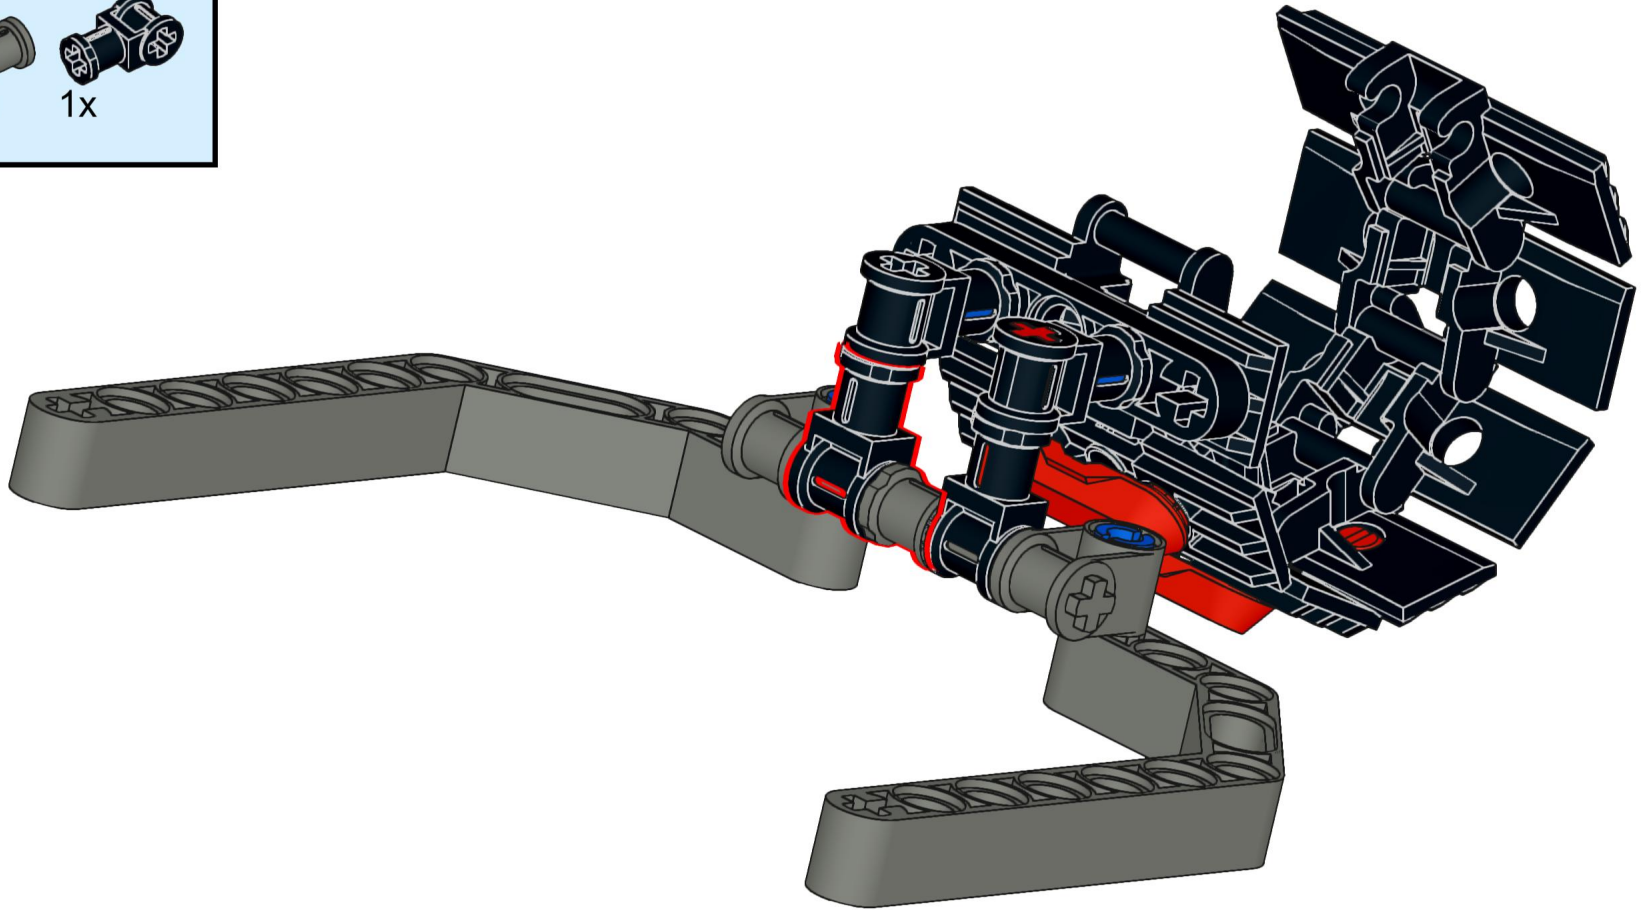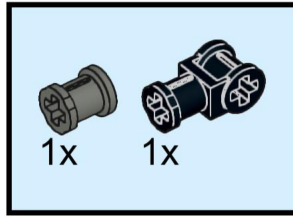



21

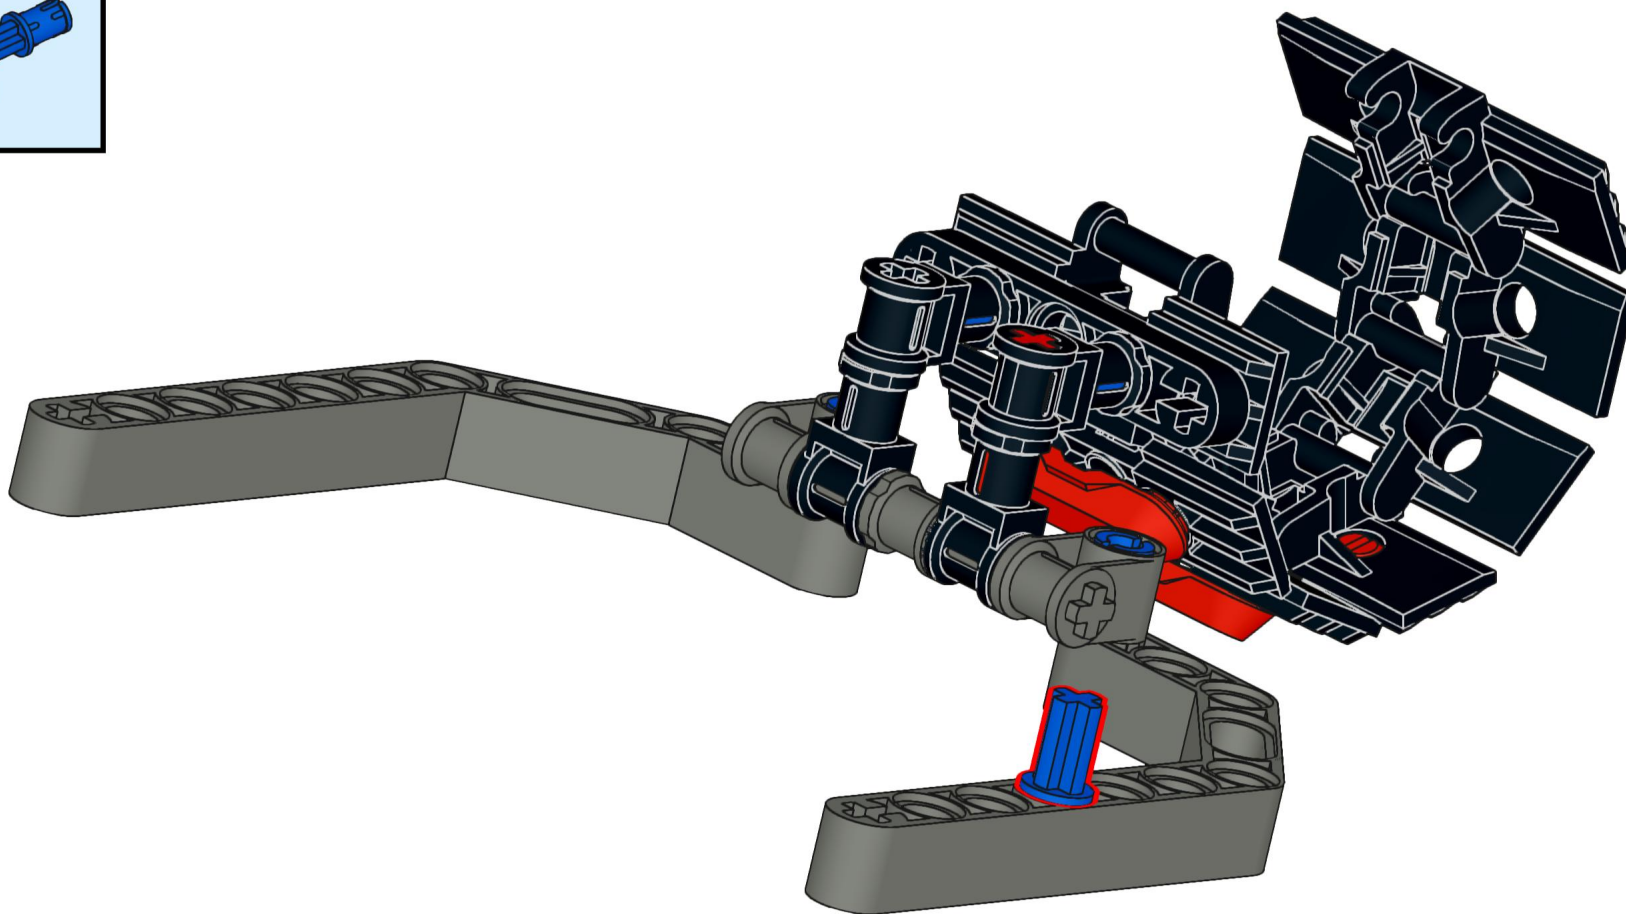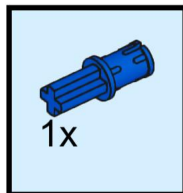



22

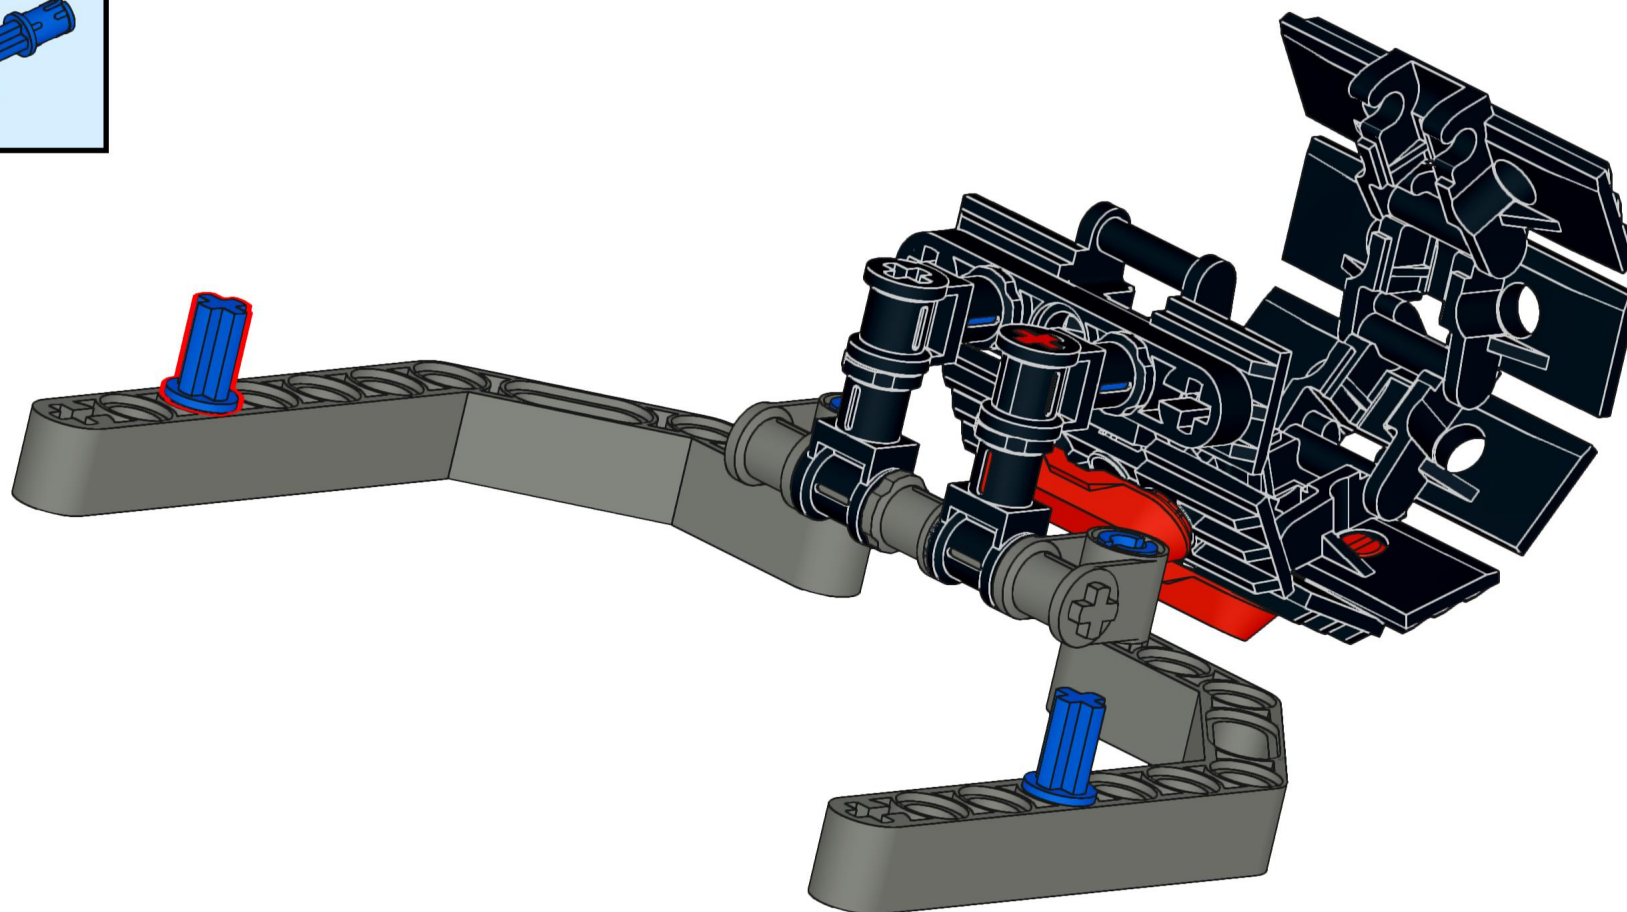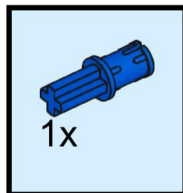



23

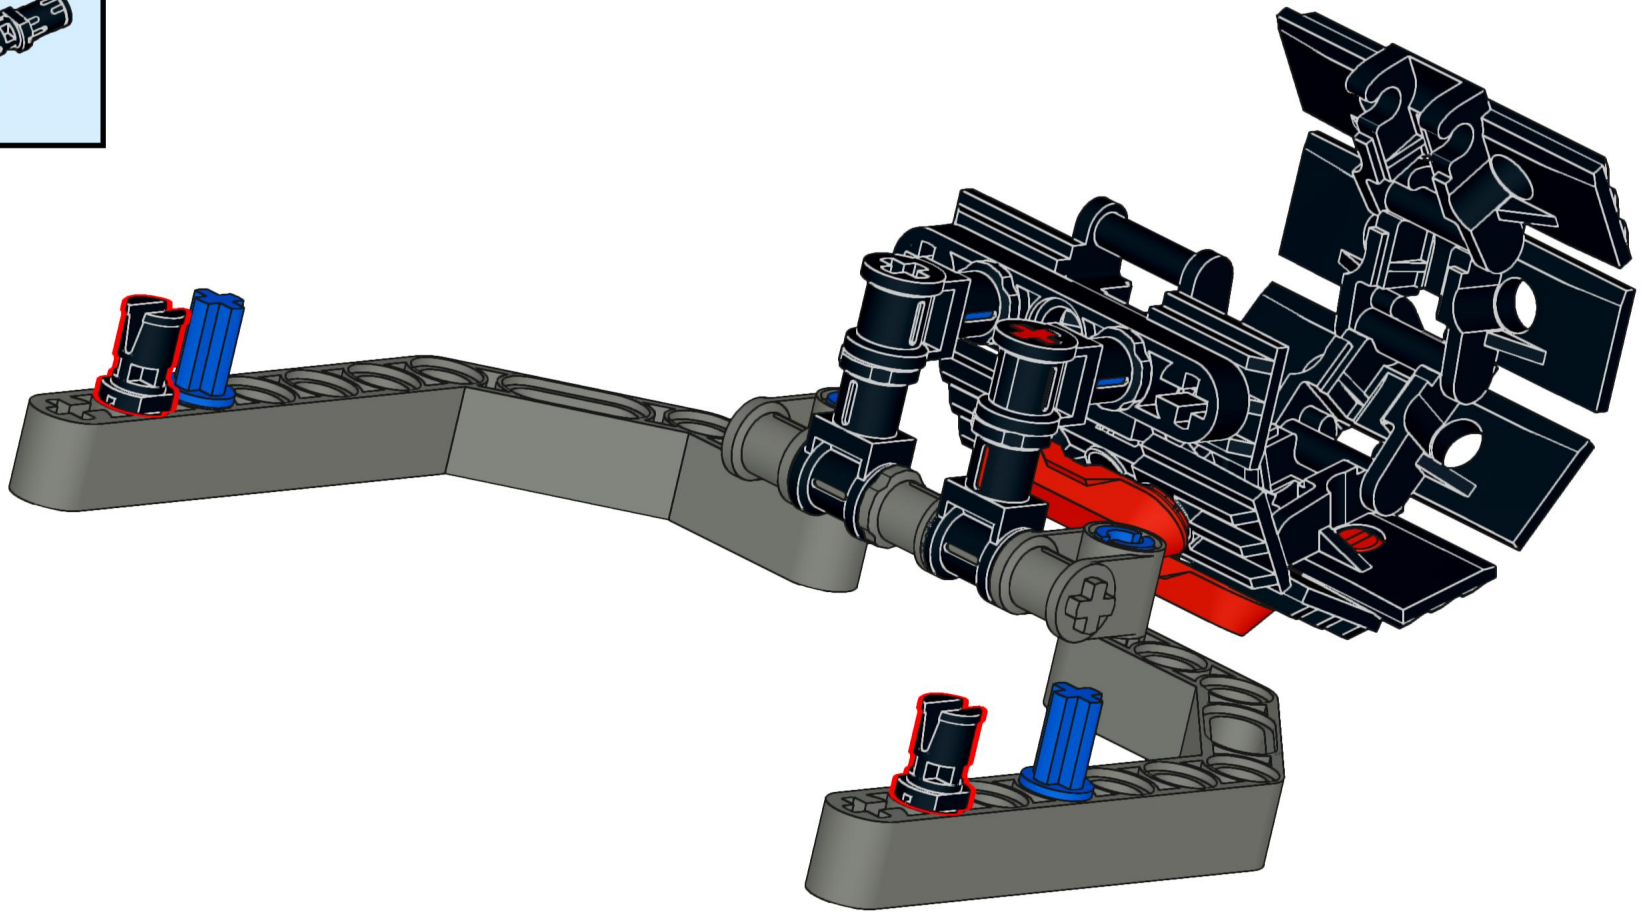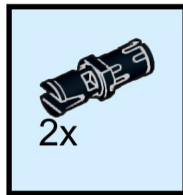



24

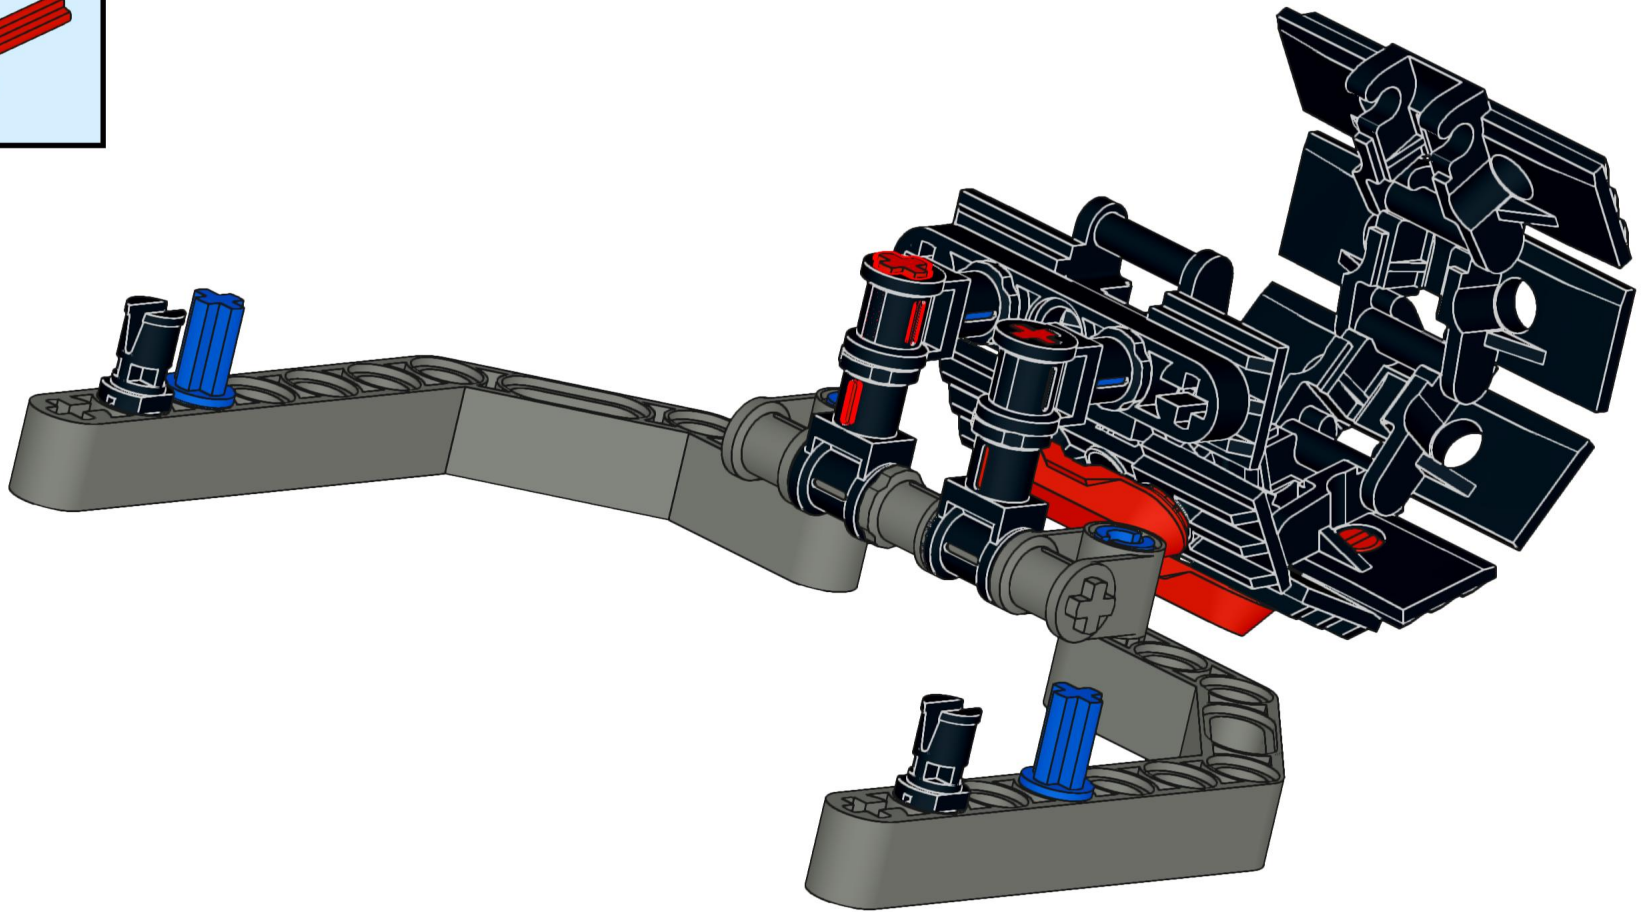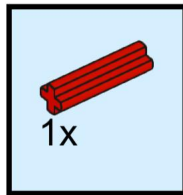



25

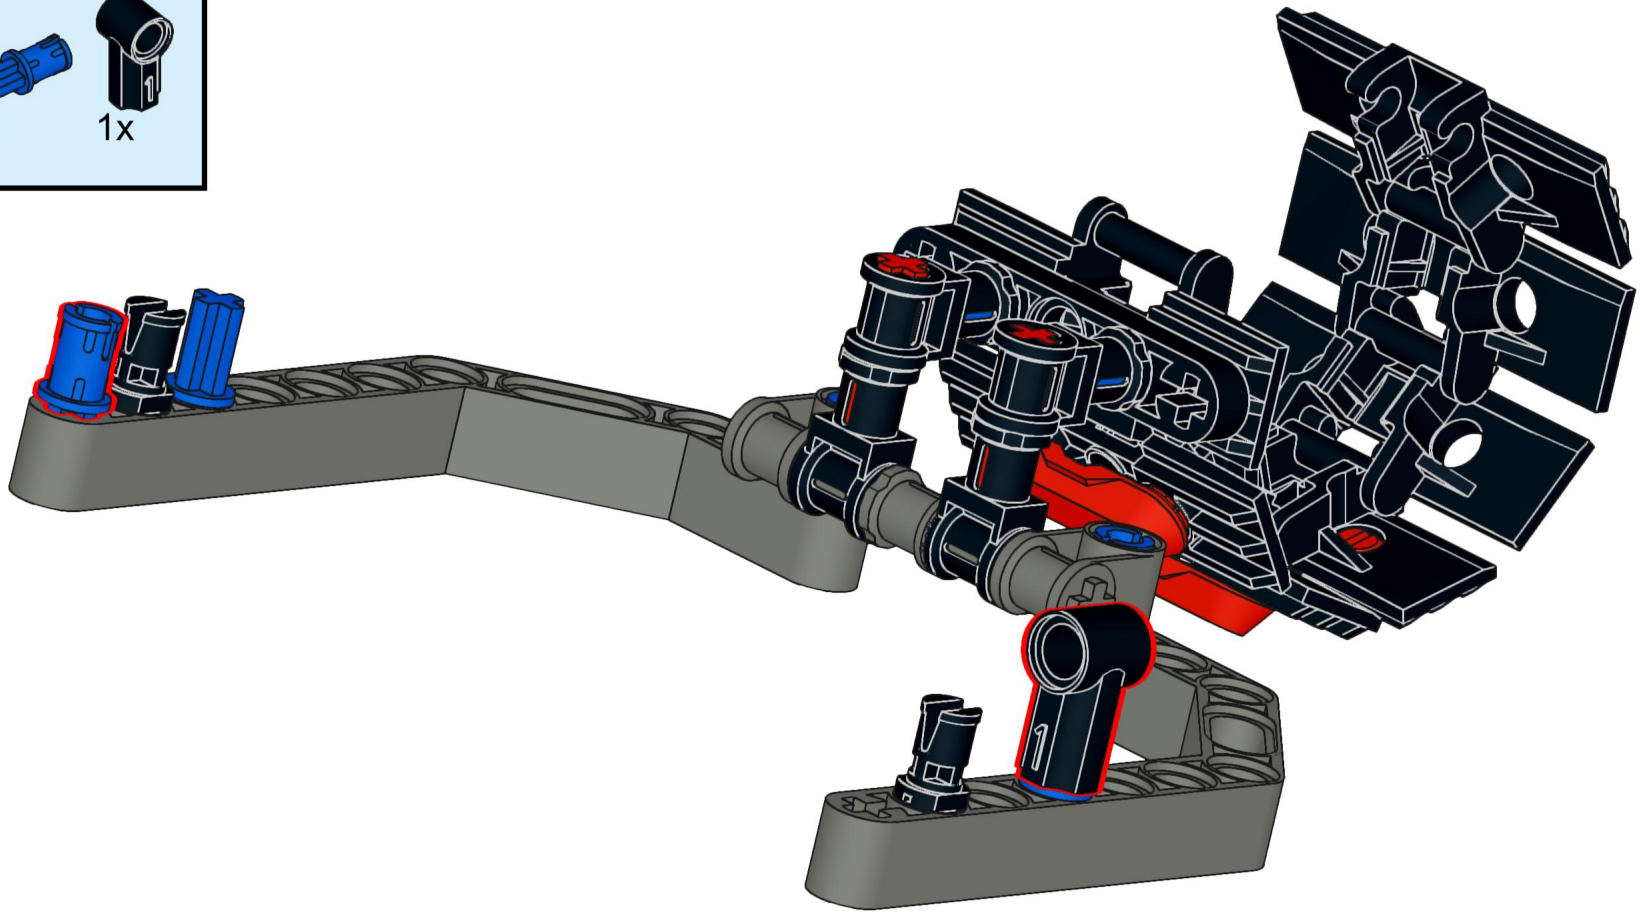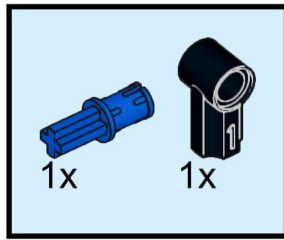



26

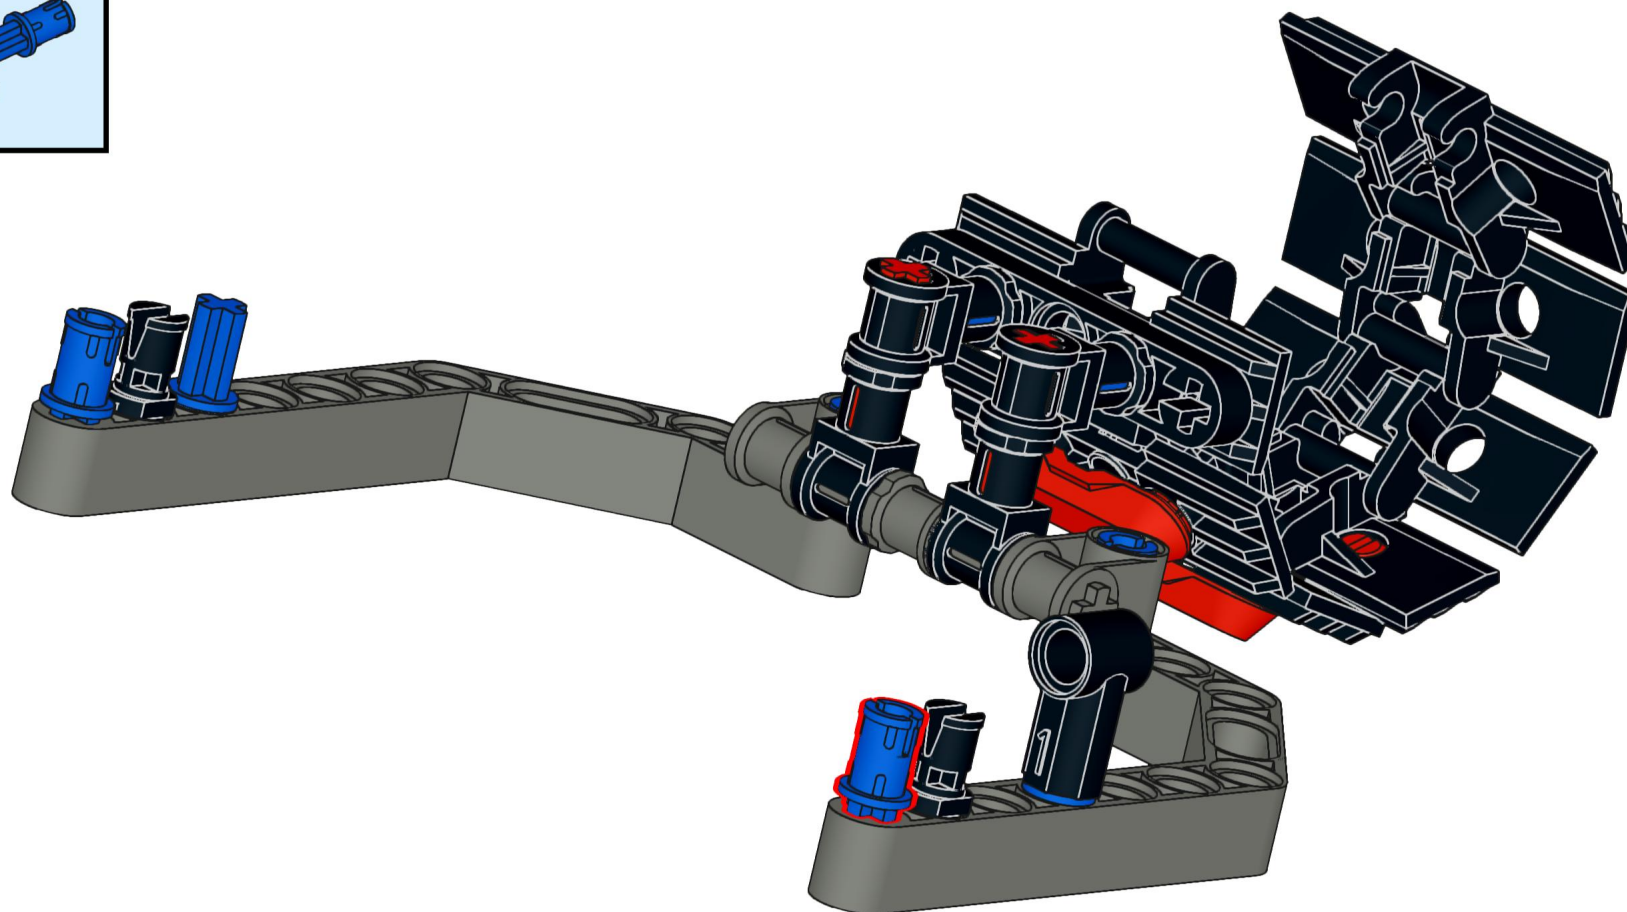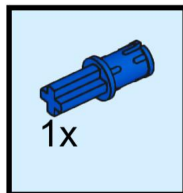



27

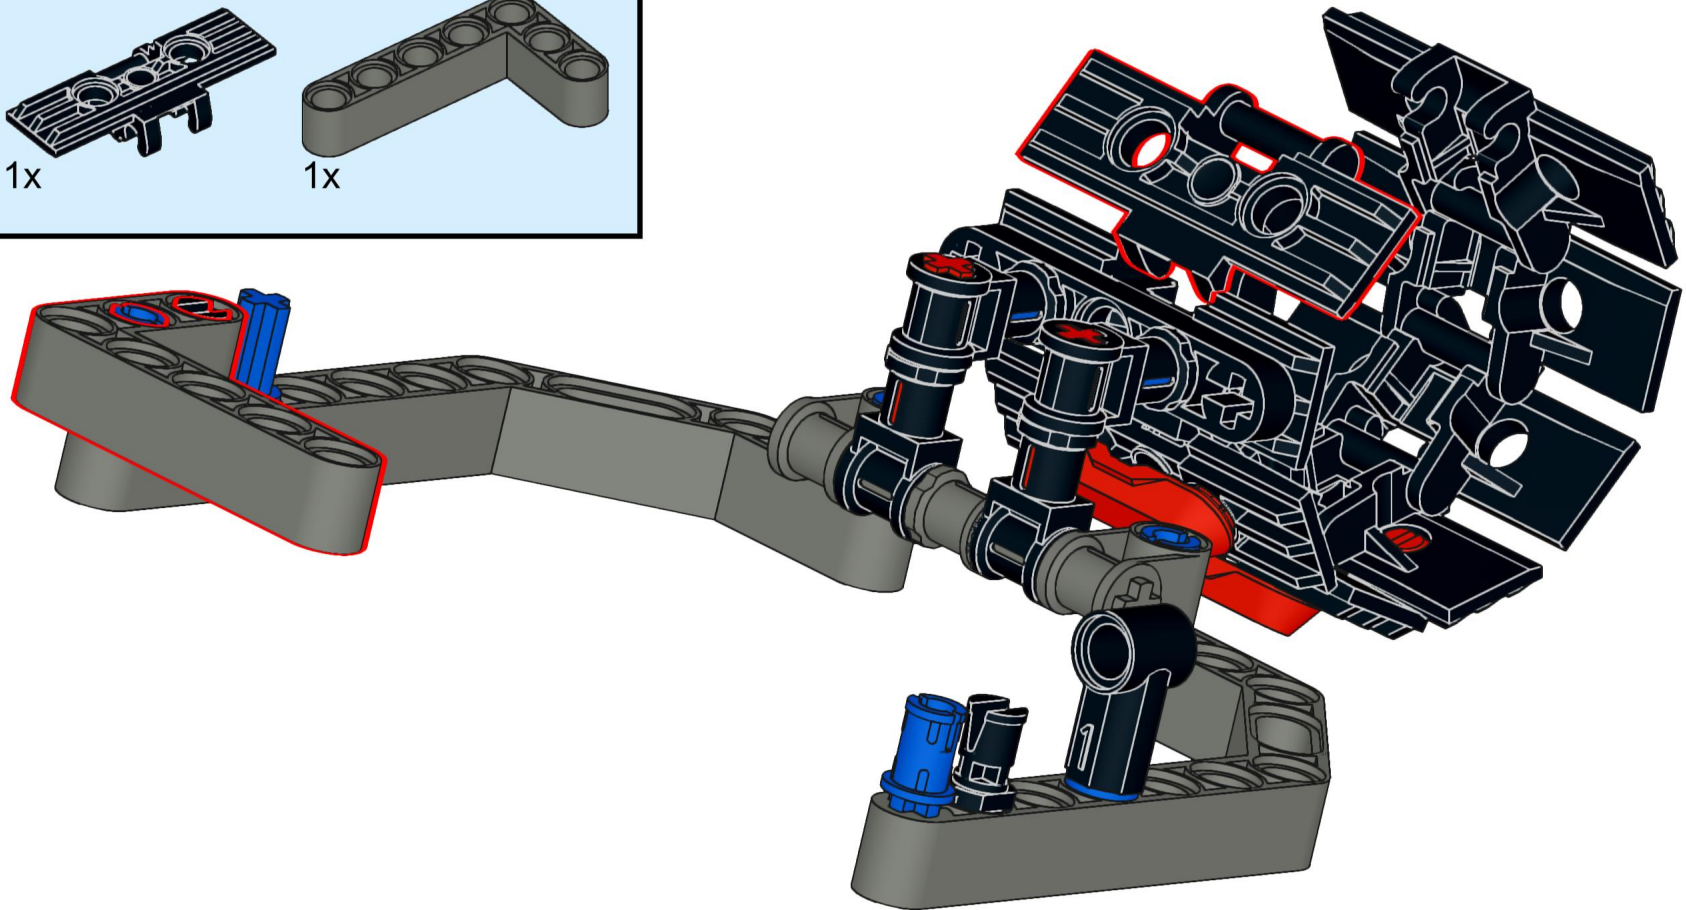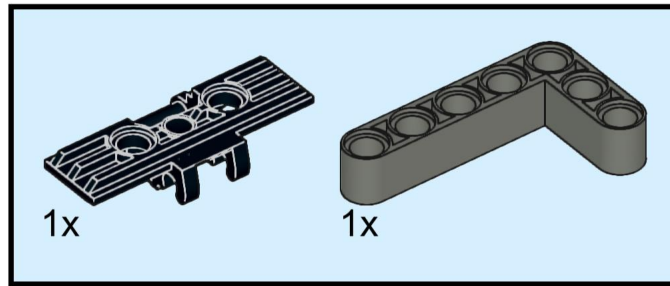



28

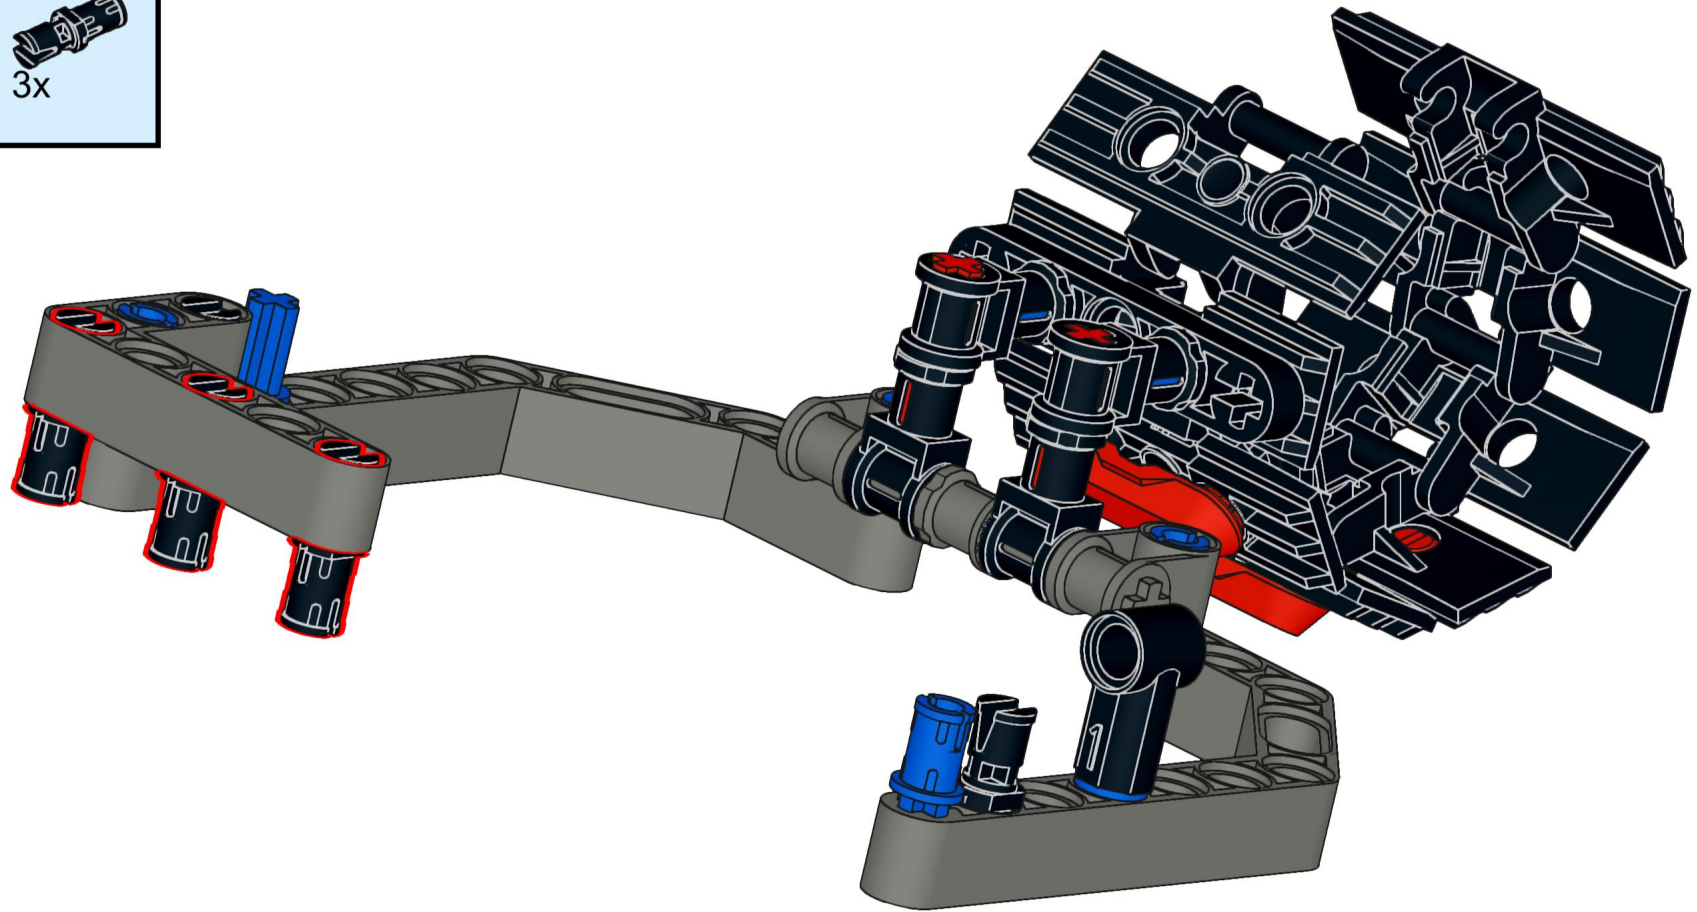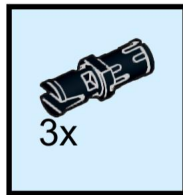



29

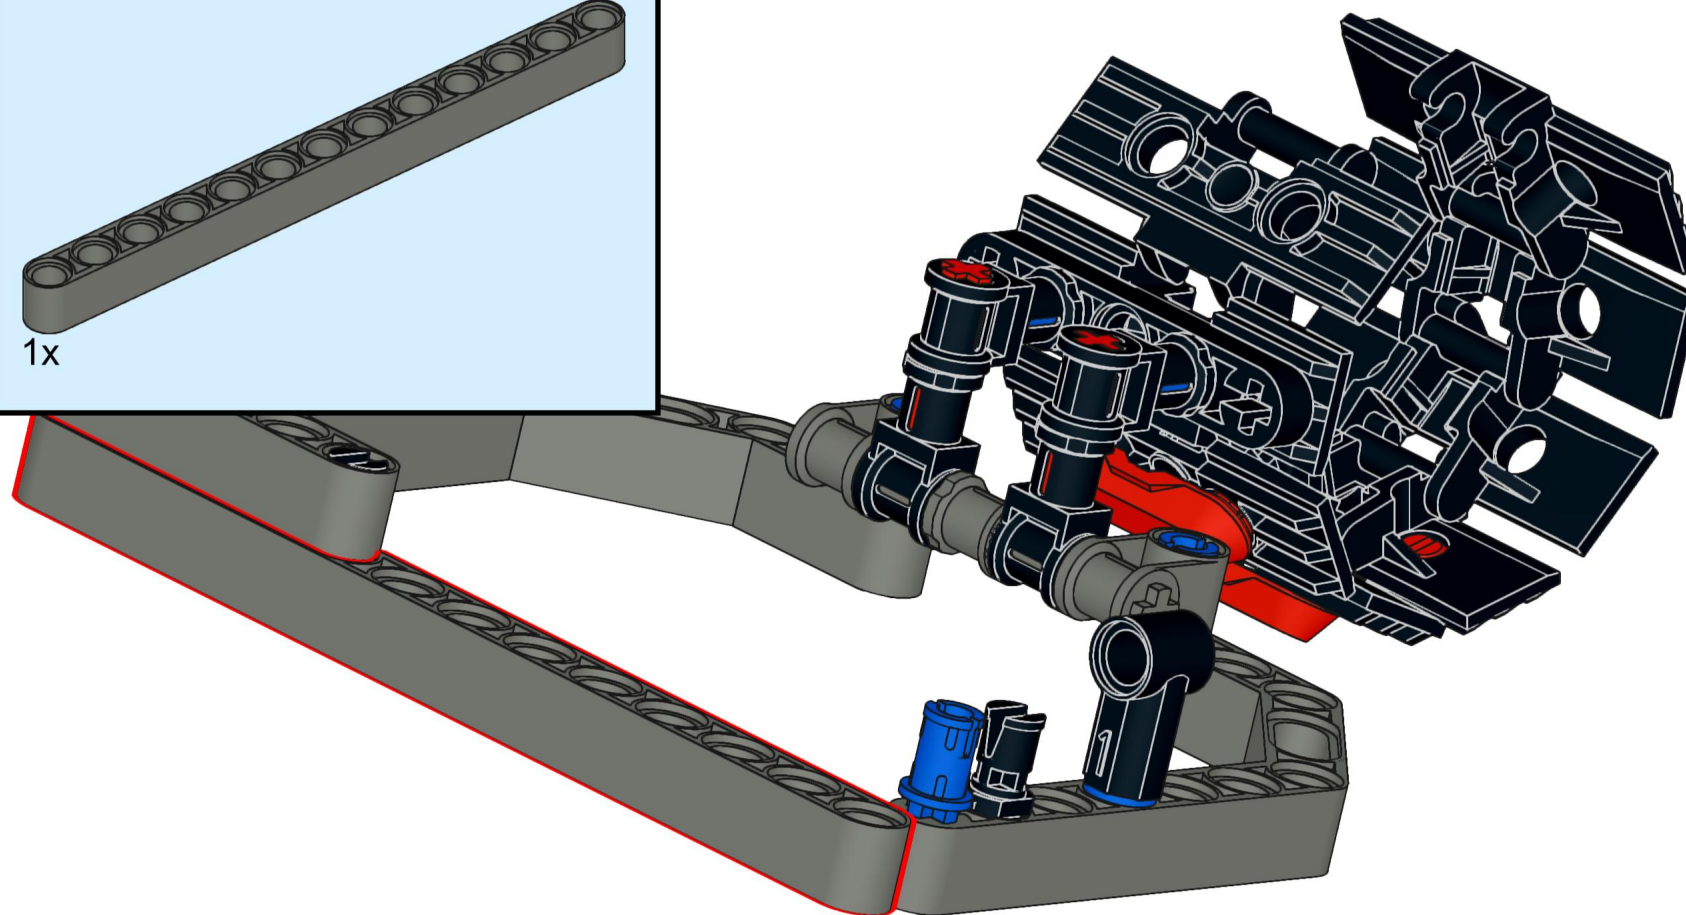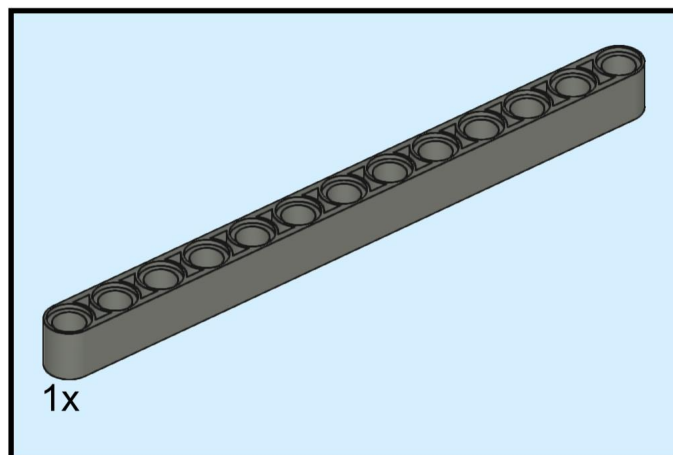



30

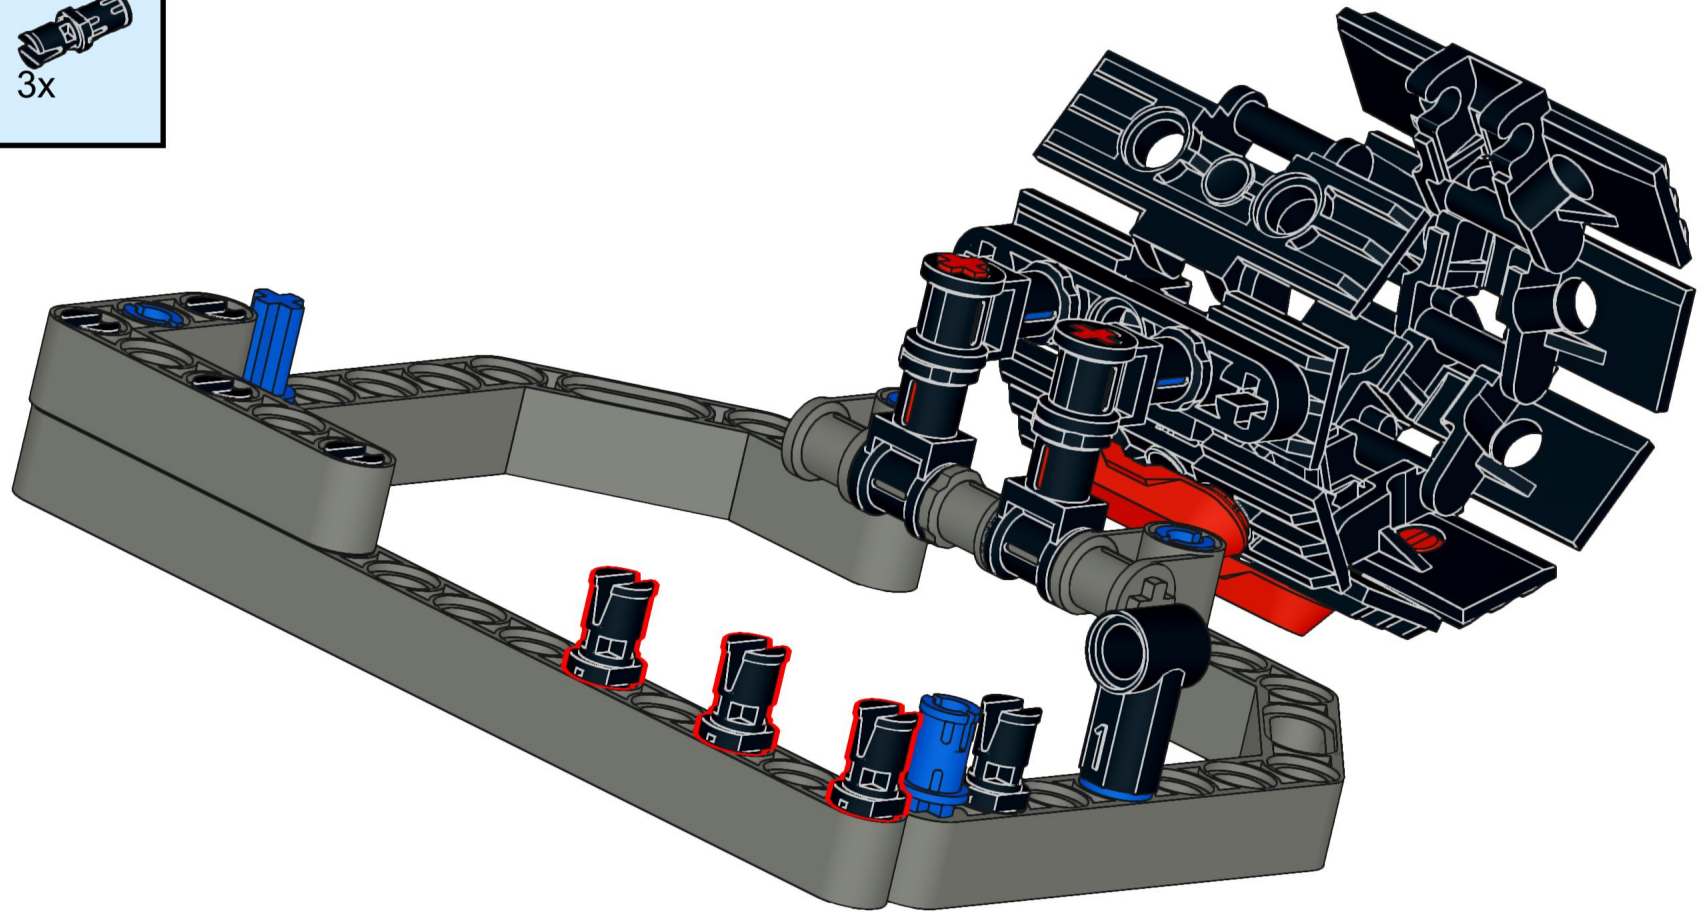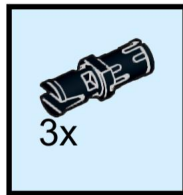



31

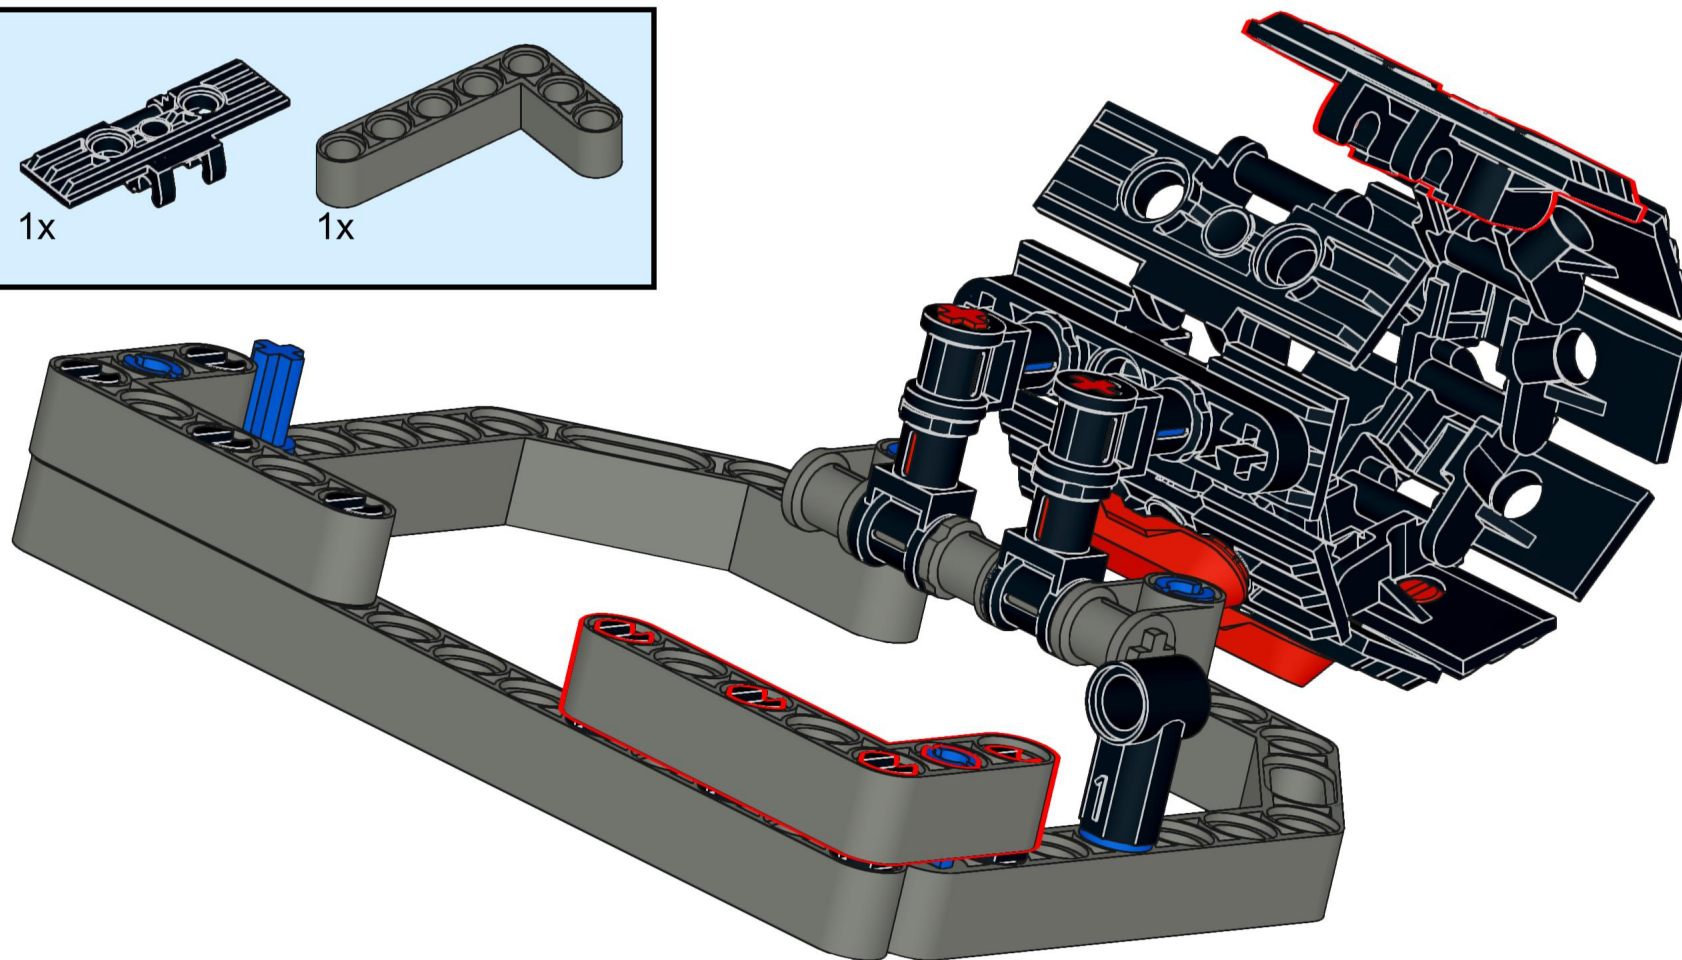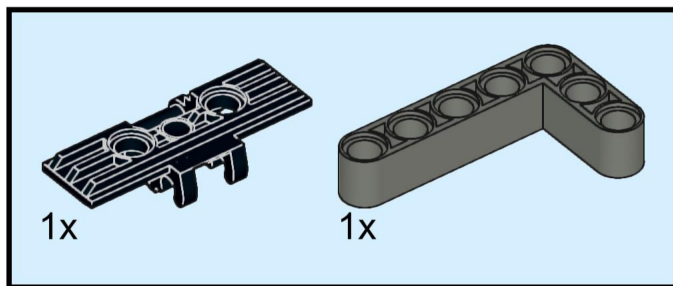



32

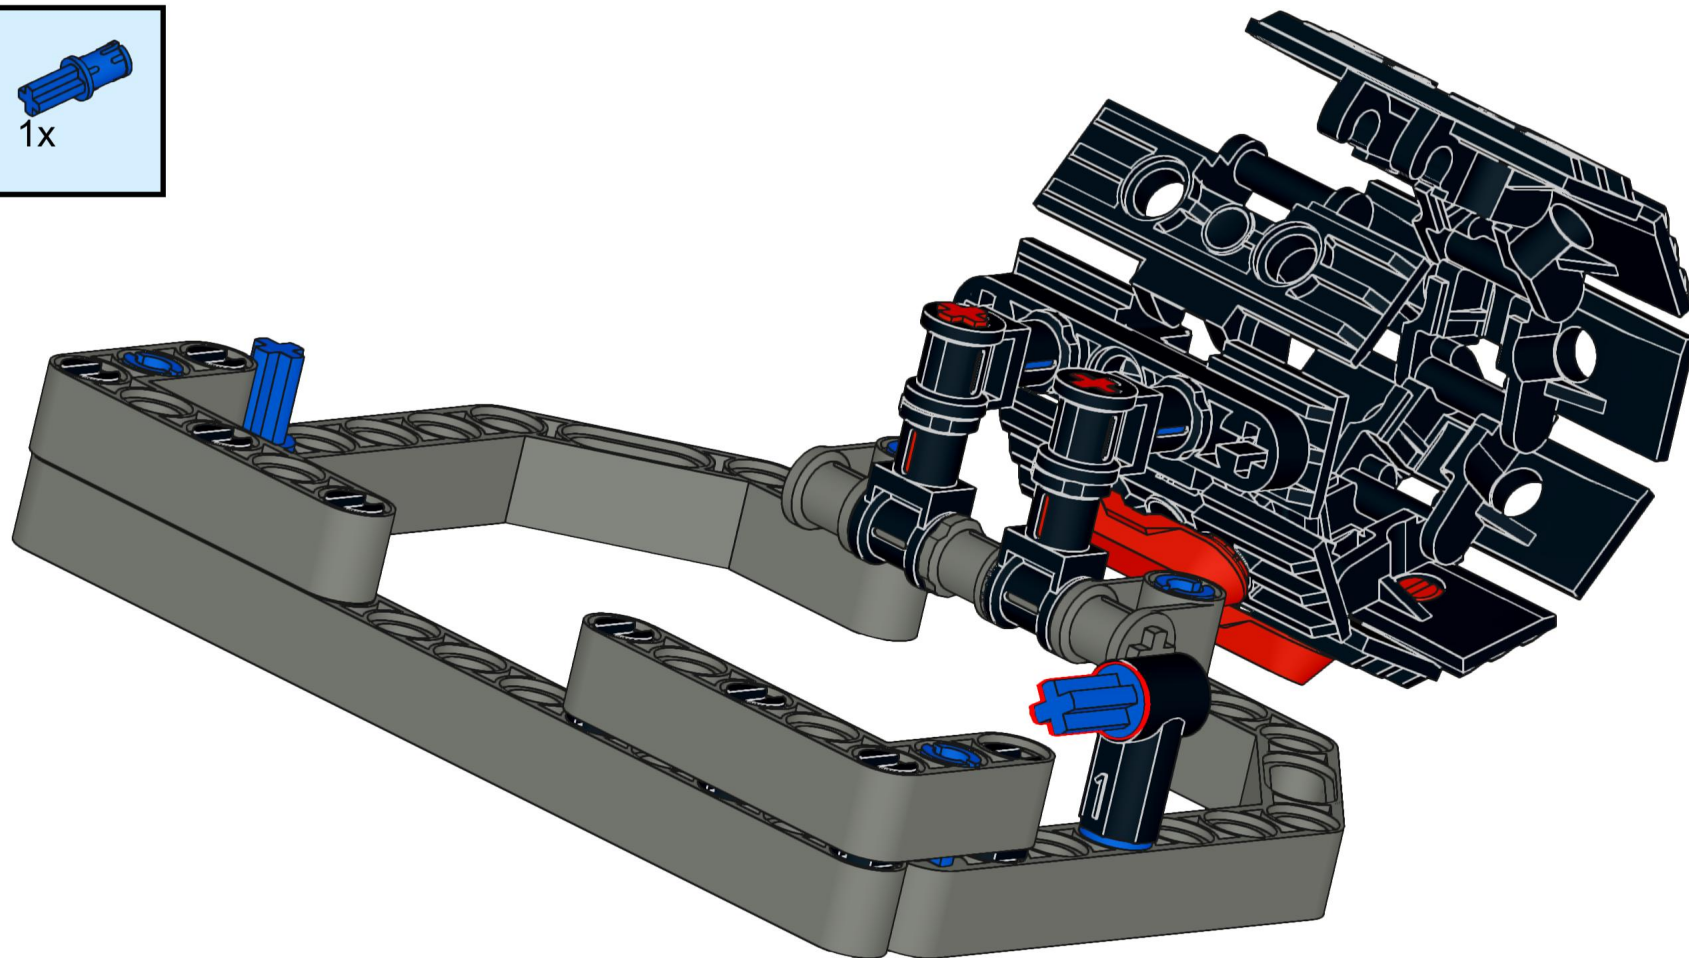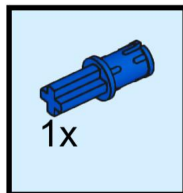



33

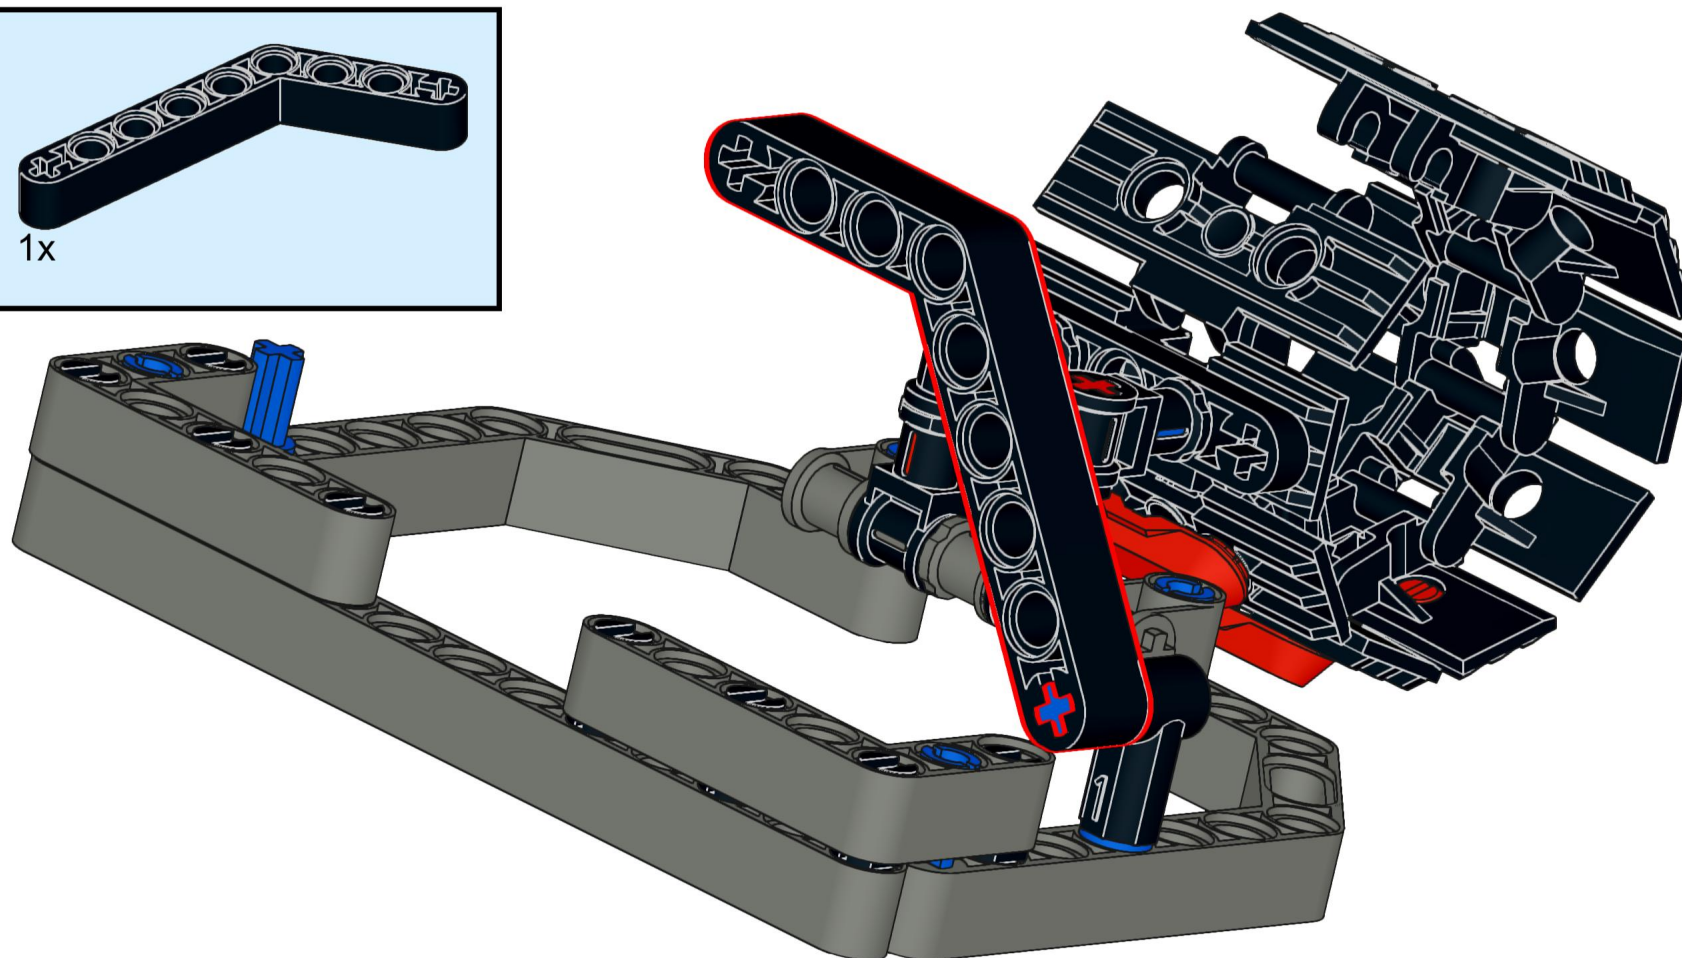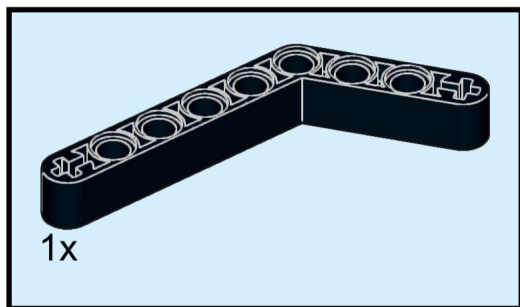



34

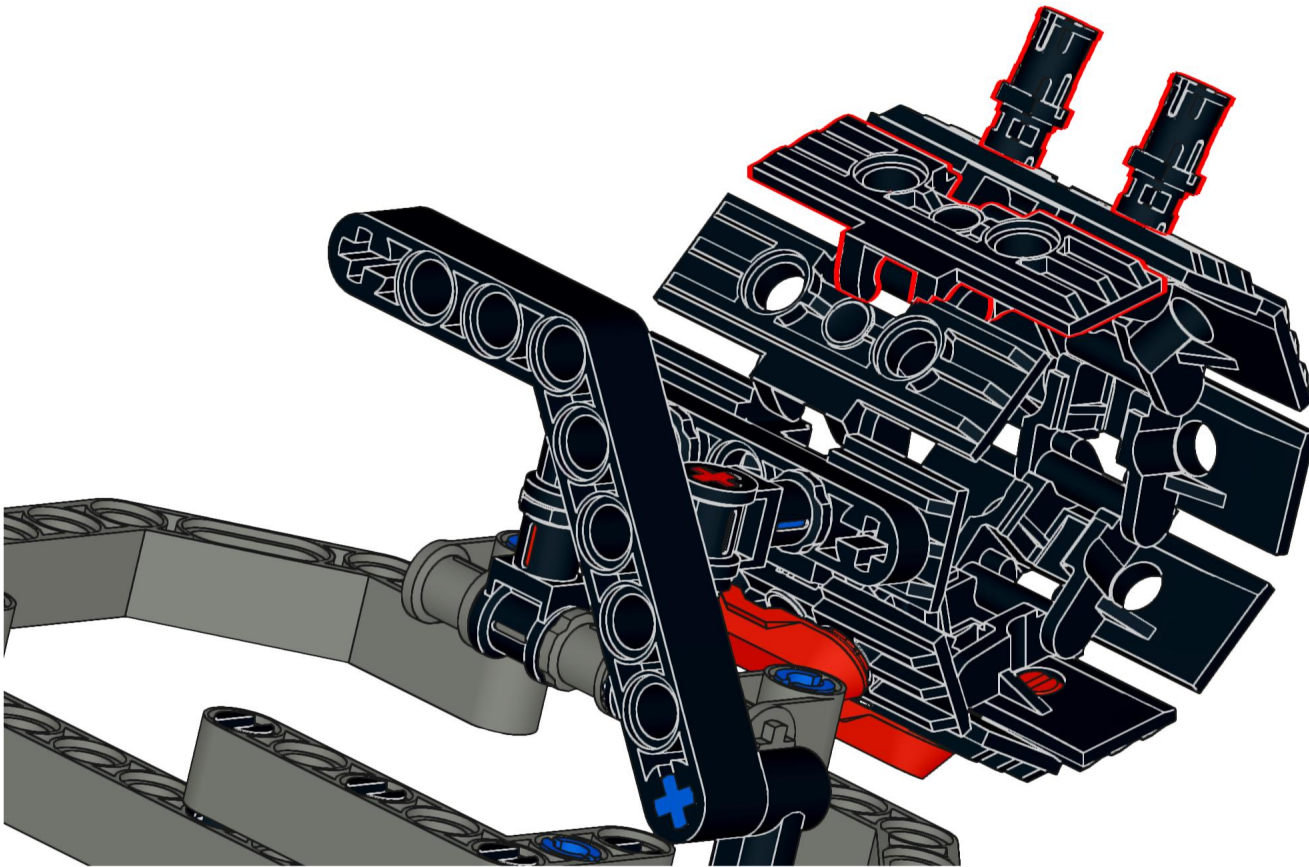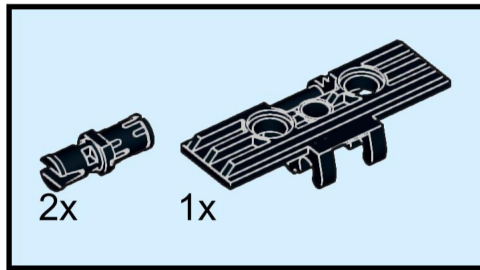



35

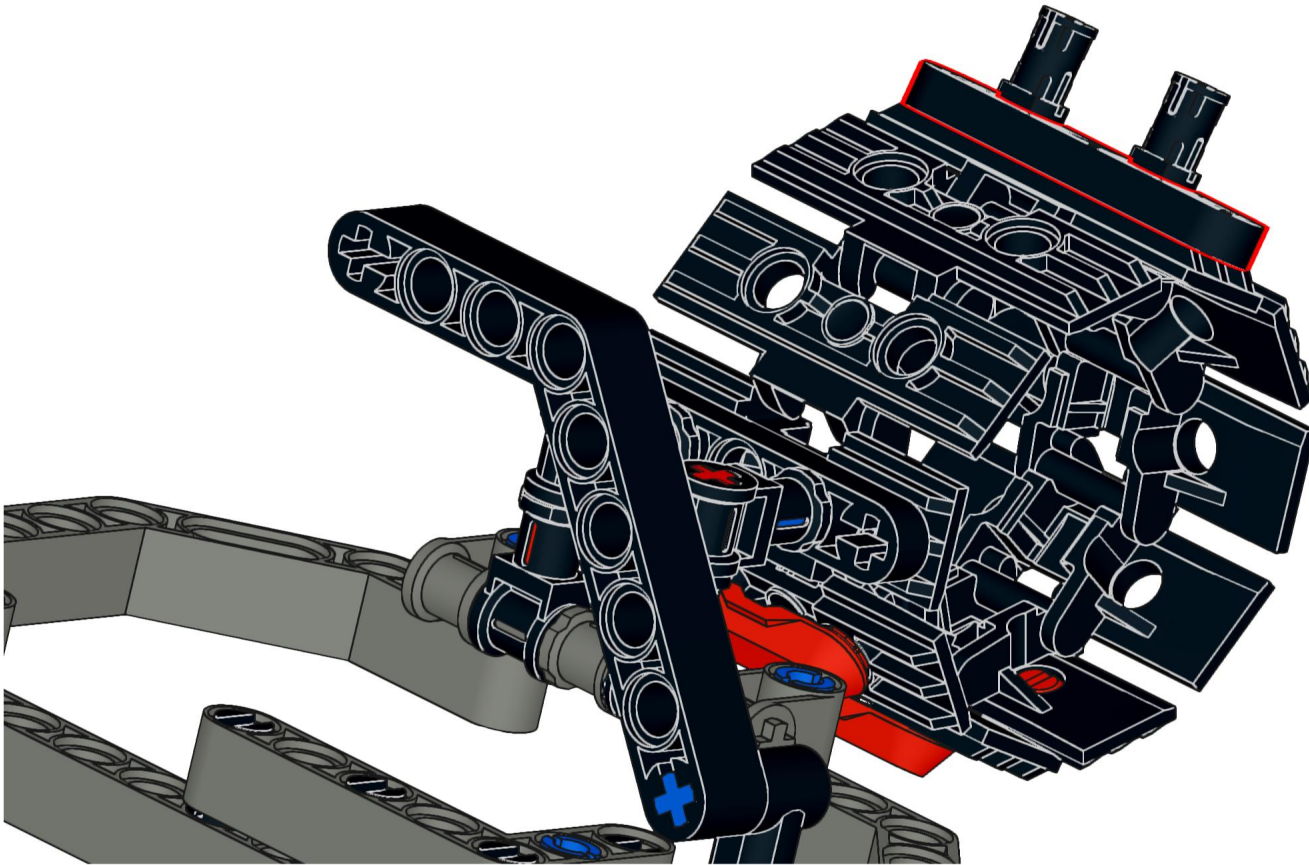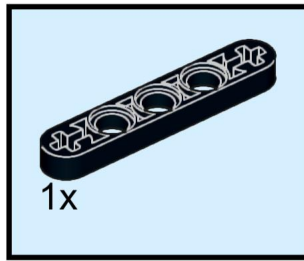



36

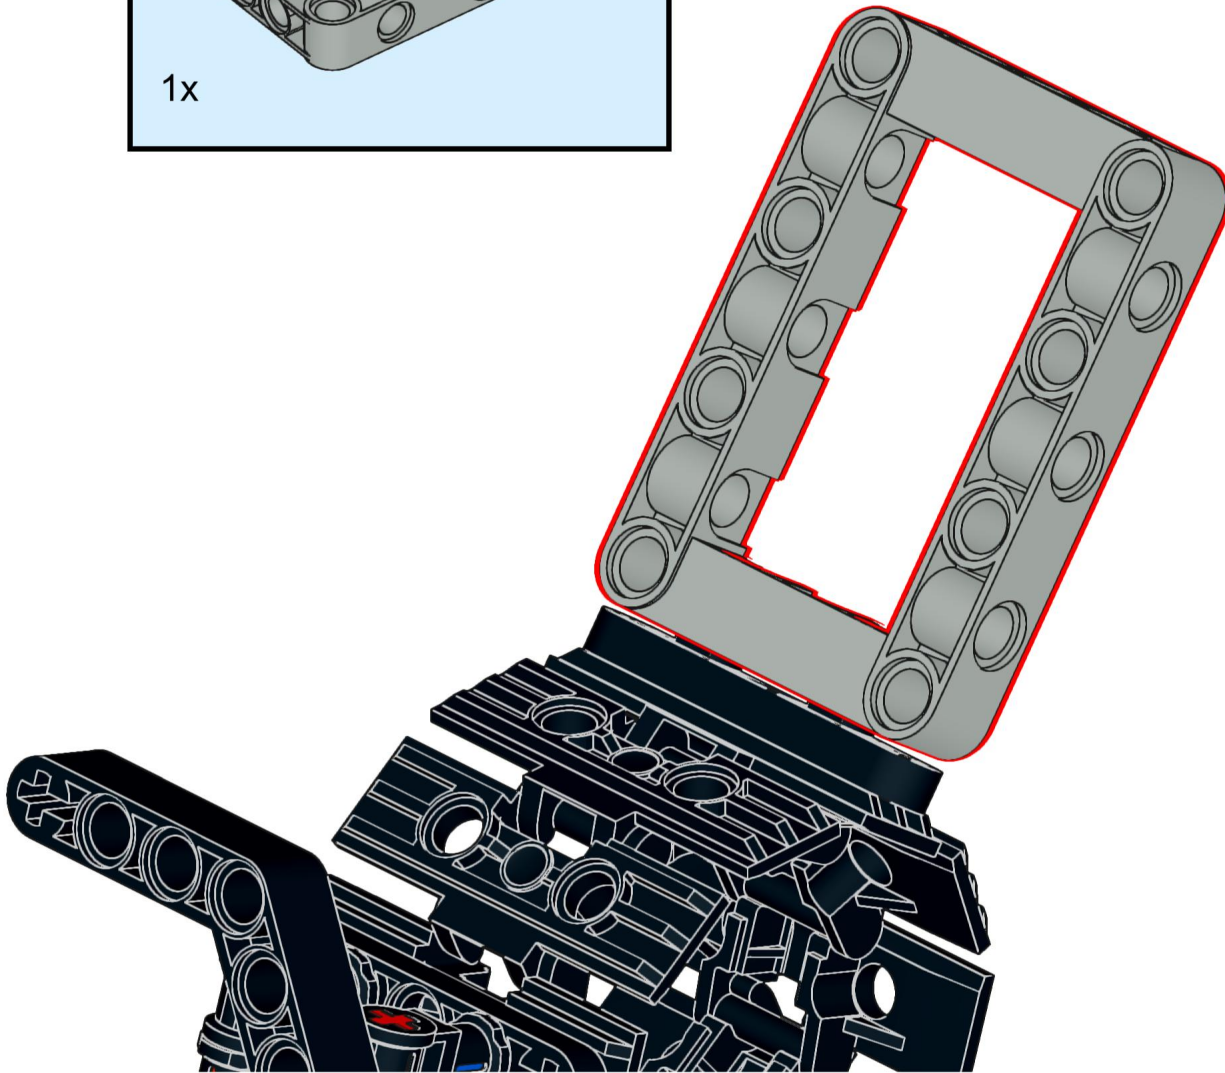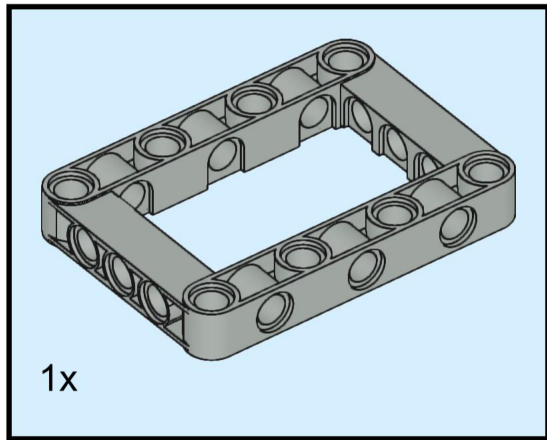



37

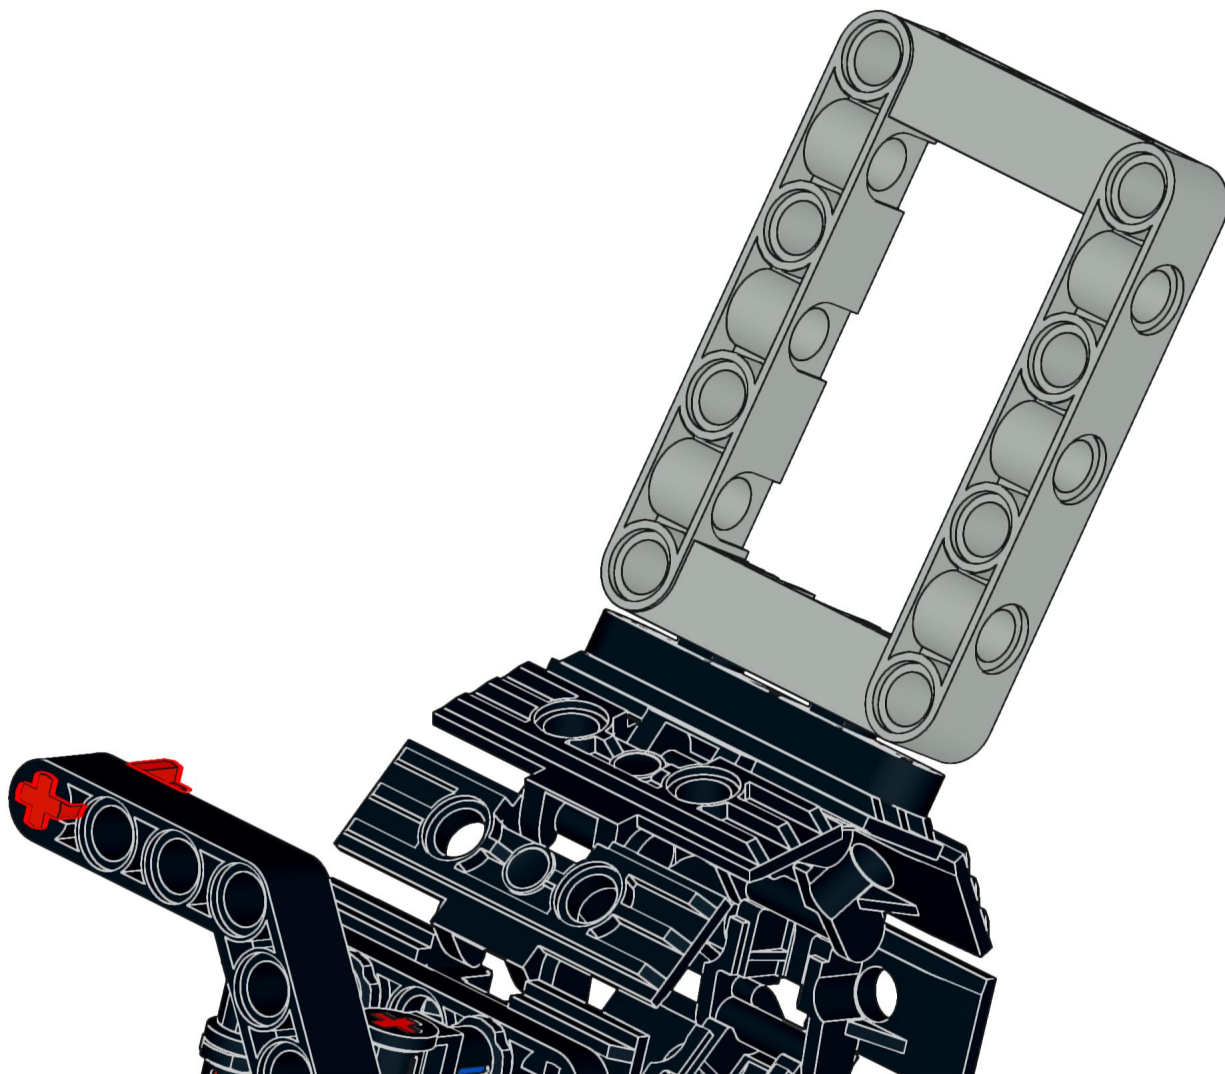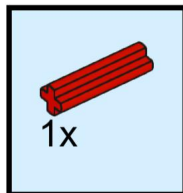



38

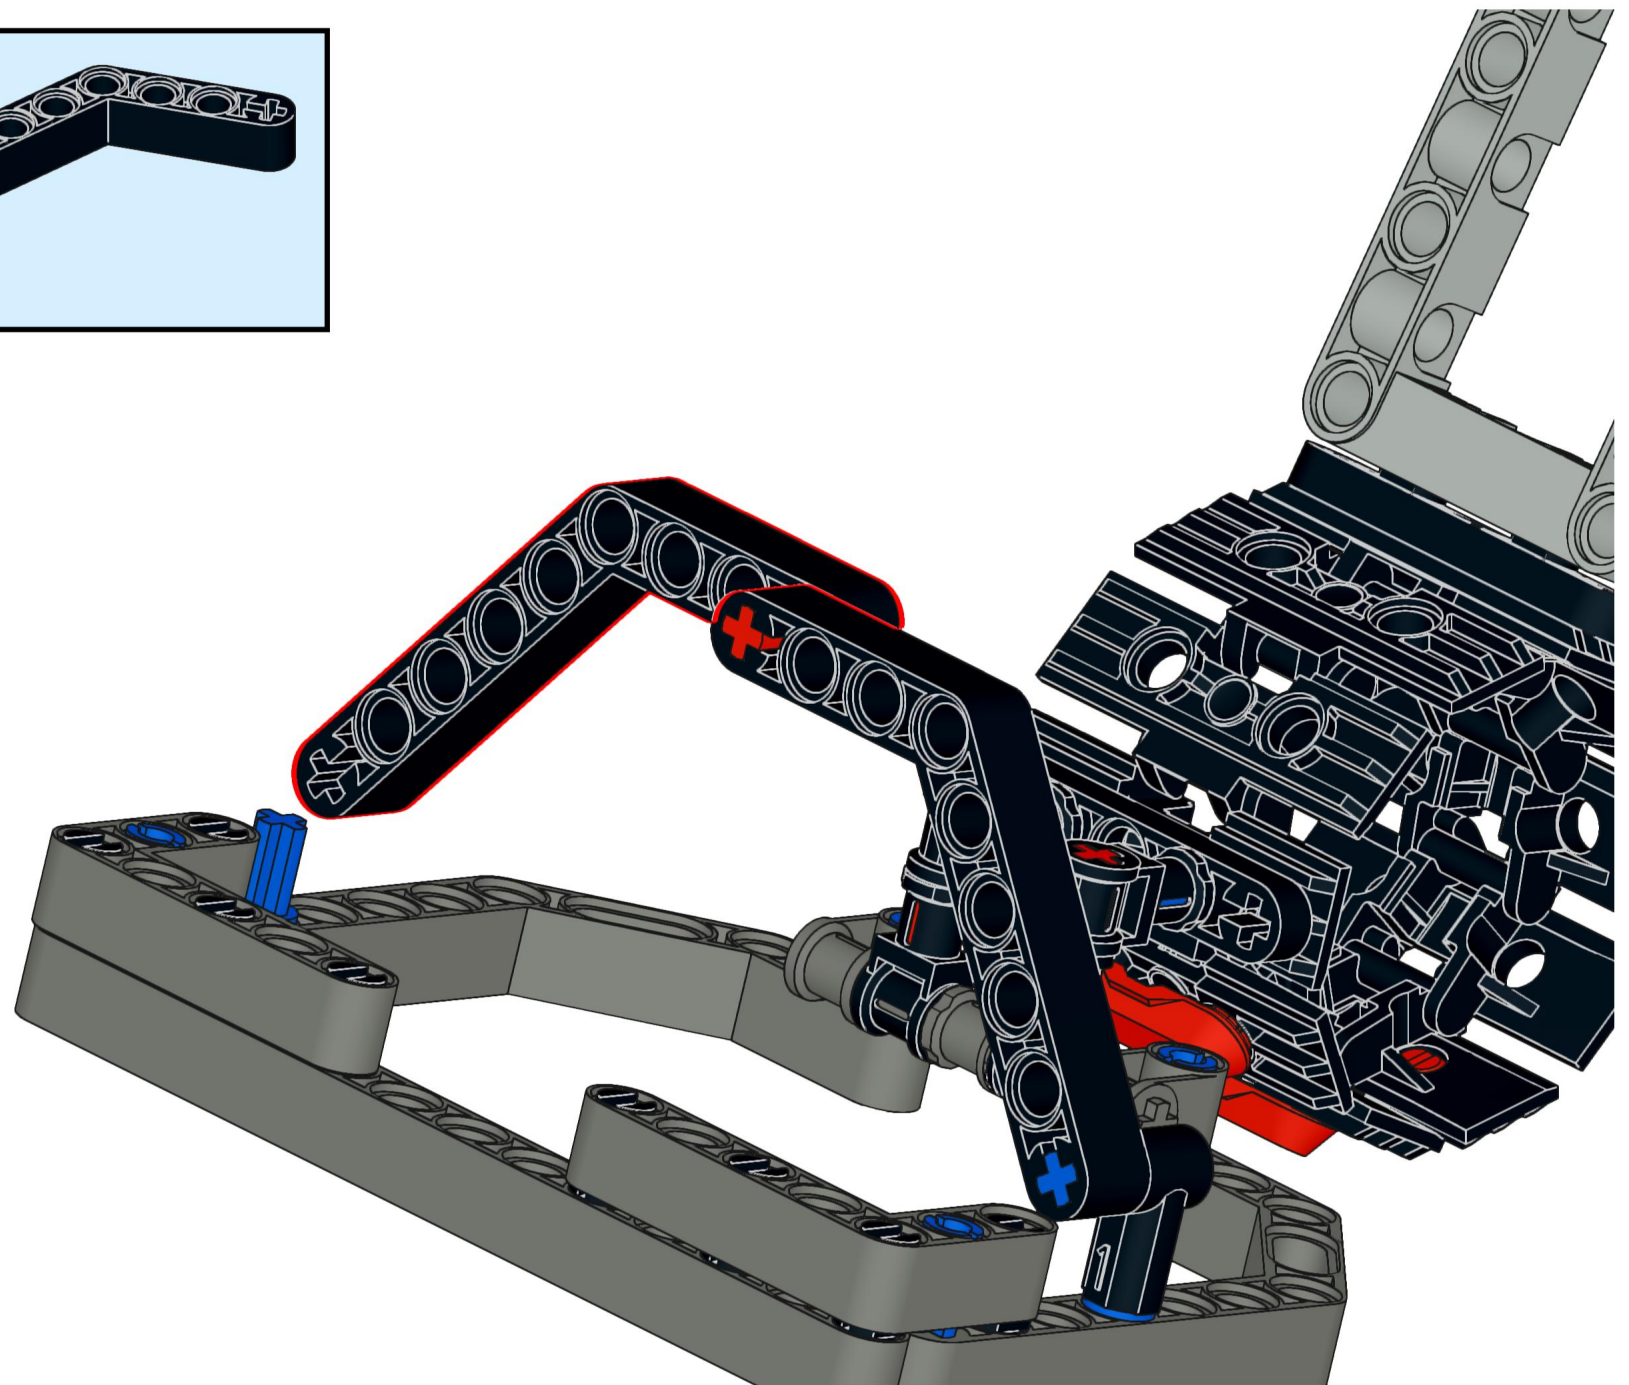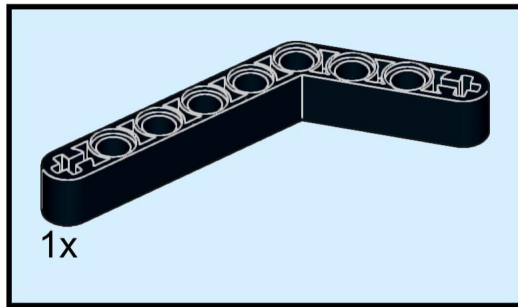


39

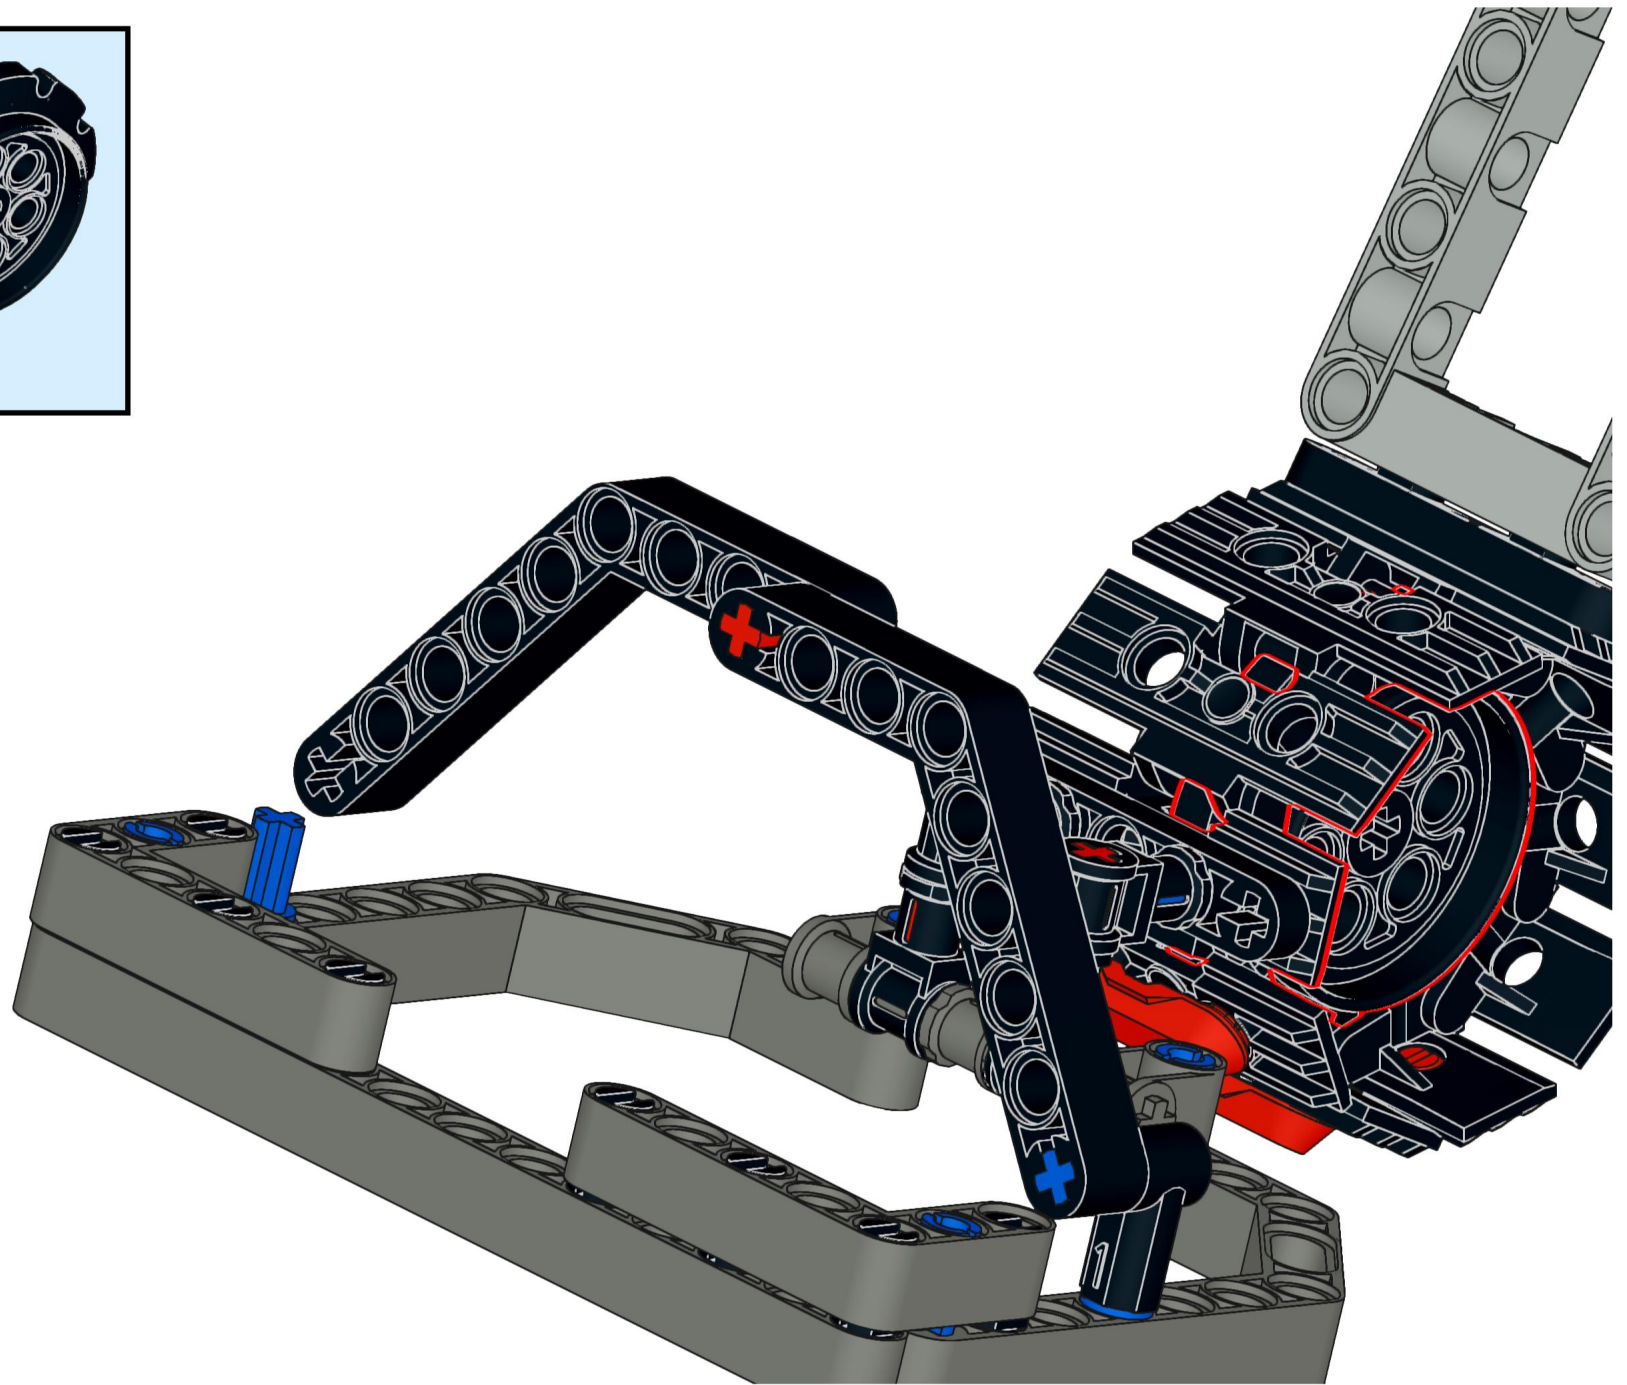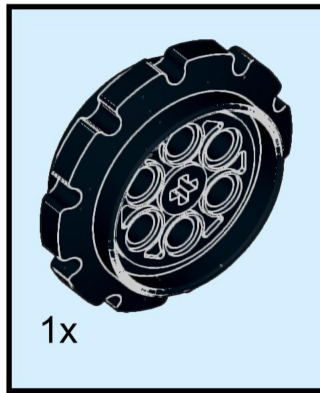



40

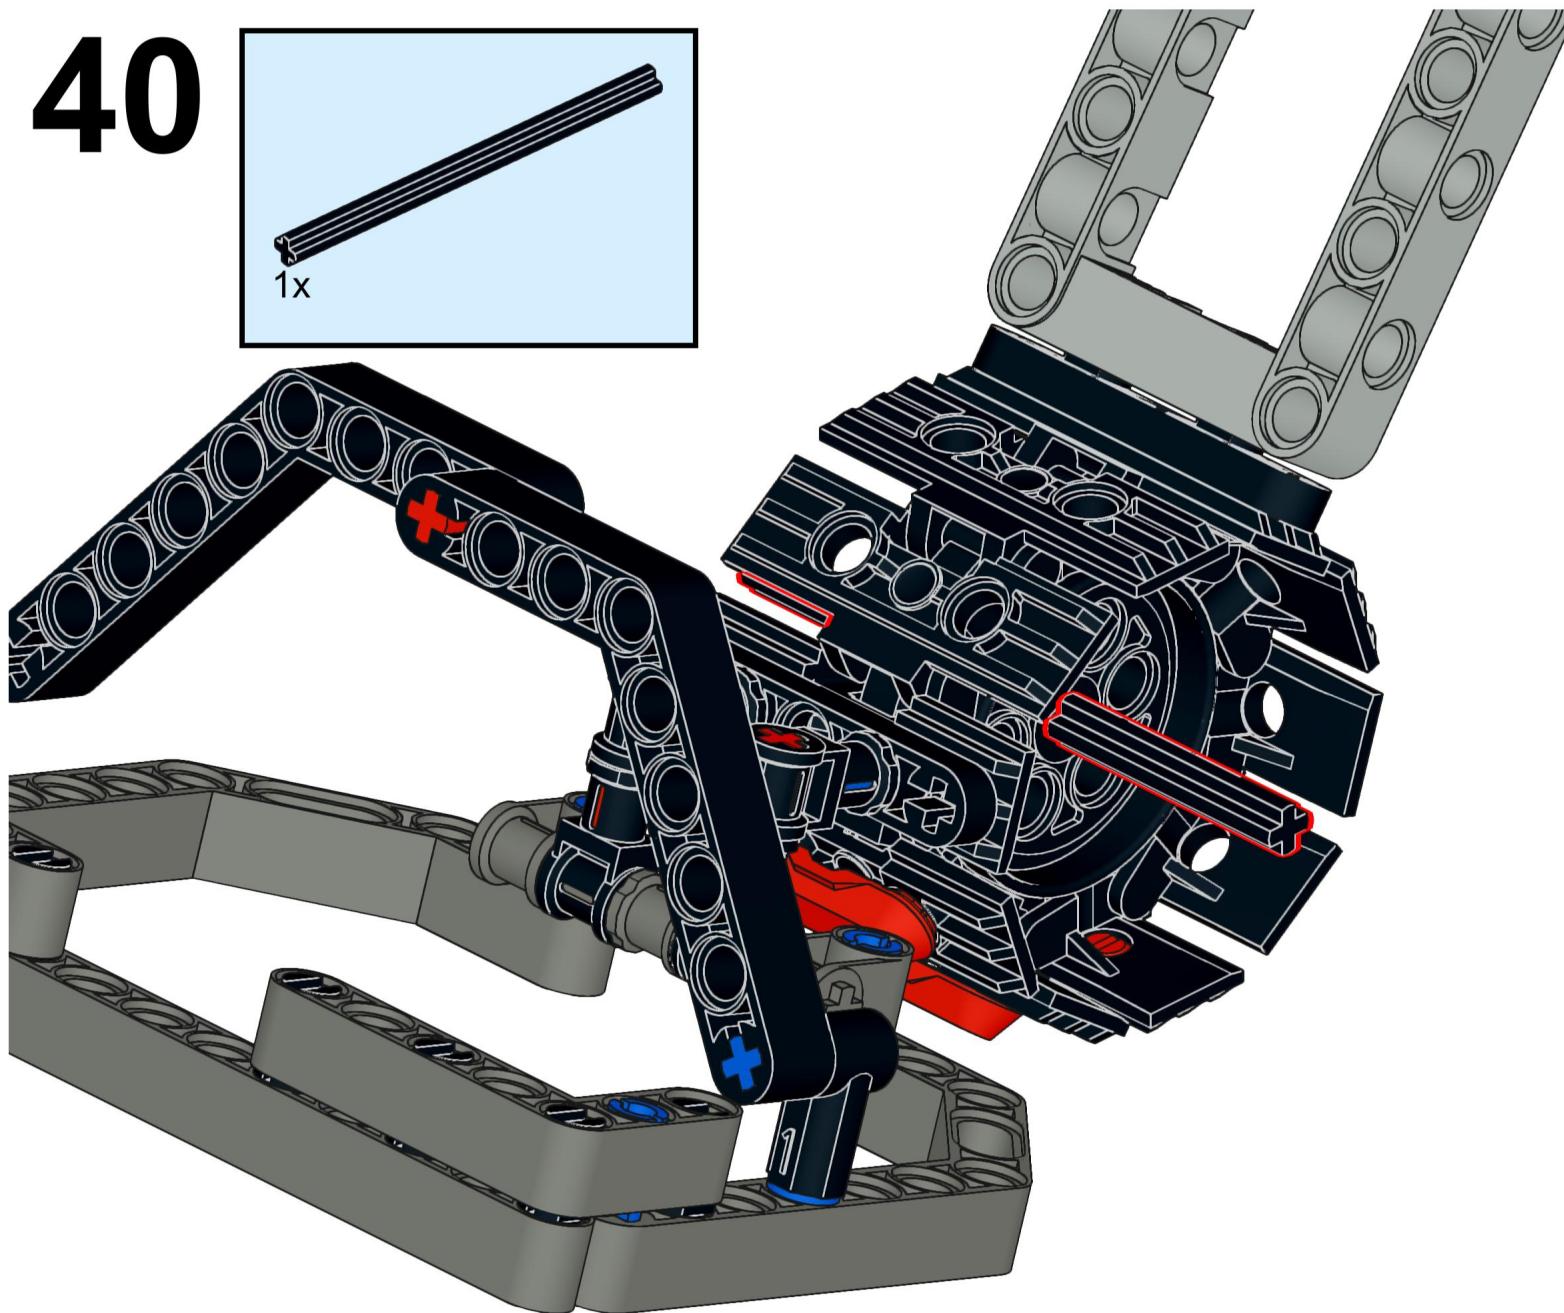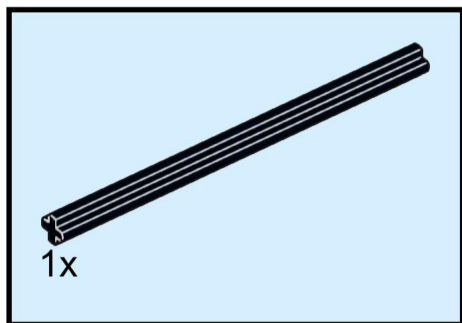


41

 2x

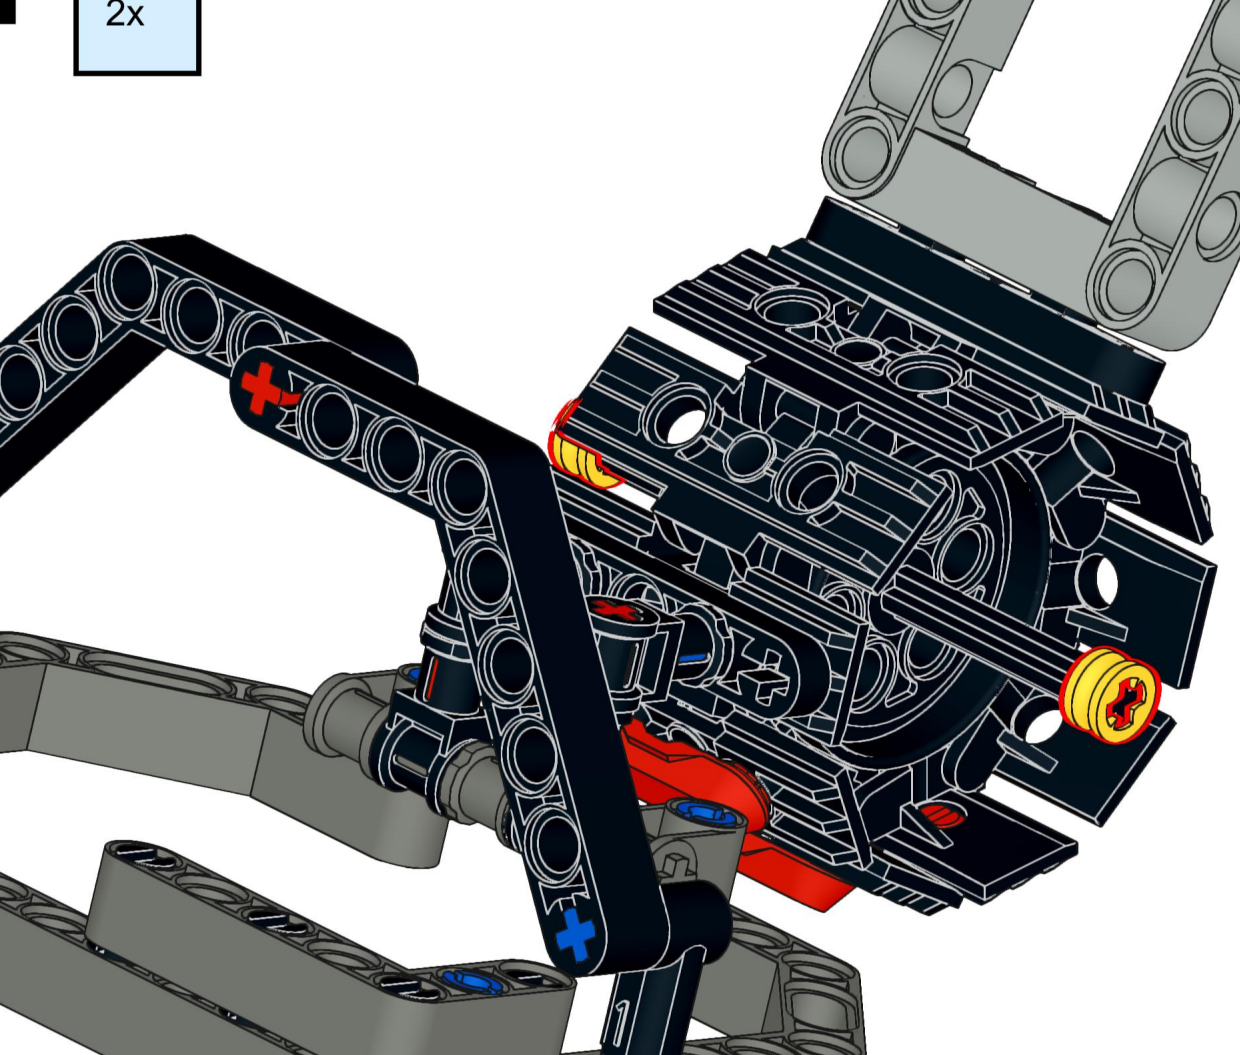

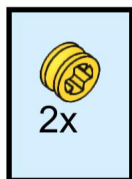

42

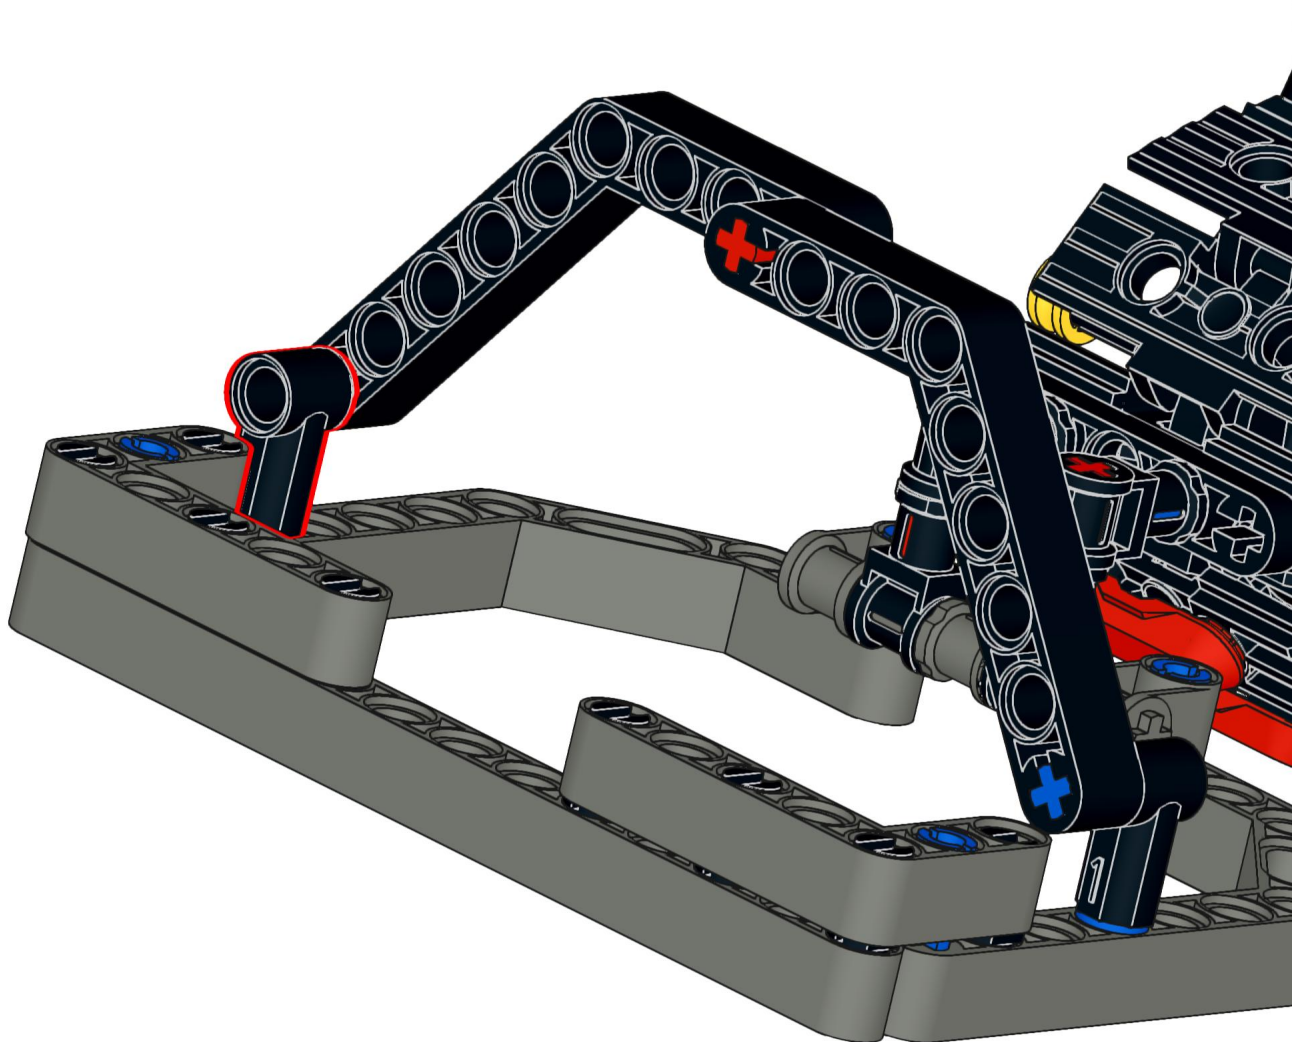

43

